


Manual

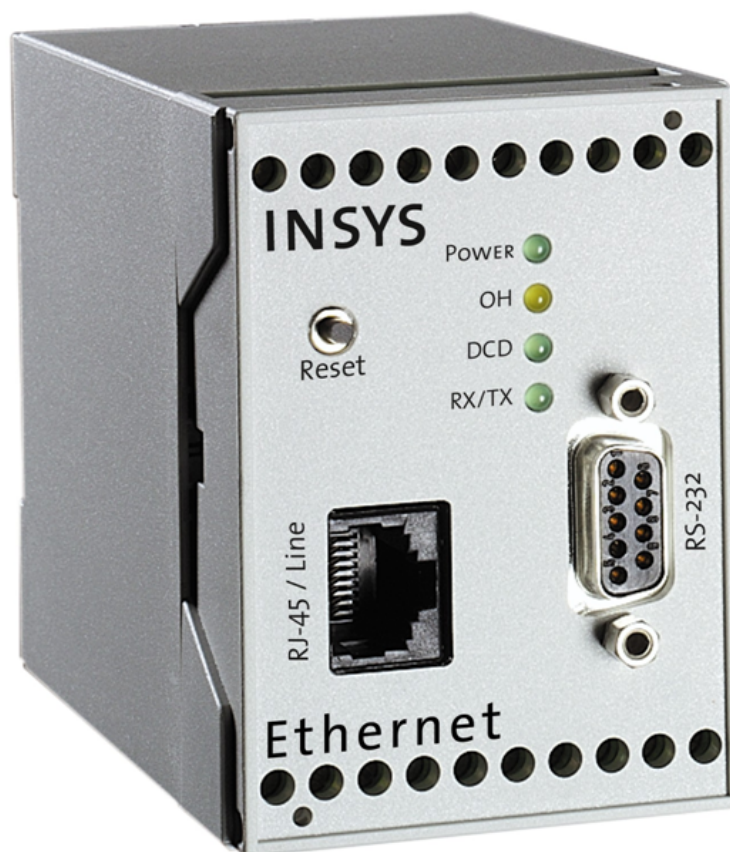

INSYS ETHERNET 5.X

Copyright © November 06 INSYS MICROELECTRONICS GmbH

Any duplication of this manual is prohibited. All rights on this documentation and the devices are with INSYS MICROELECTRONICS GmbH Regensburg.

Restrictions of guarantee

This handbook contains a concise description. The compilation of the text has been made with the utmost care. Despite all efforts, there may be deviations compared with the actual functions. No guarantee can therefore be given for the accuracy of the contents. We can neither take over a legal responsibility nor any liability for incorrect information and their consequences. Suggestions for improvements and comments are gladly accepted.

Trademarks

The use of a trademark not shown below is not an indication that it is freely available for use.

MNP is a registered trademark of Microcom Inc.

IBM PC, AT, XT are registered trademarks of International Business Machine Corporation.

INSYS ® is a registered trademark of INSYS MICROELECTRONICS GmbH.

Windows™ is a registered trademark of Microsoft Corporation.

Publisher:

INSYS MICROELECTRONICS GmbH

Waffnergasse 8

D-93047 Regensburg, Germany

Phone: +49 (0)941/56 00 61

Fax: +49 (0)941/56 34 71

e-mail: insys@insys-tec.de

Internet: <http://www.insys-tec.de>

Subject to technical changes as well as correction.

Date: Nov-06

Item: 31-22-03.074 english

Version: 1.0

Language: EN

1	INTRODUCTION.....	6
2	OVERVIEW.....	9
2.1	RANGE OF FUNCTIONS.....	9
2.2	DEVICE HISTORY	11
3	TECHNICAL DATA	12
3.1.1	Mechanical characteristics.....	12
3.1.2	Display elements.....	12
3.1.3	Terminal layout.....	13
3.1.4	Power supply.....	14
3.1.5	Serial interface RS232 (V.24)	14
3.1.6	Digital inputs and outputs.....	15
3.1.7	Ethernet interface 10Base-T	15
3.1.8	Reset.....	16
3.2	CERTIFICATIONS	16
4	INITIAL OPERATION.....	17
4.1	SCOPE OF DELIVERY	17
4.2	INSTALLATION OVERVIEW	17
4.3	MOUNTING AND WIRING	18
4.4	INITIAL CONFIGURATION OF THE IP ADDRESS	18
4.4.1	Brief introduction to IP	19
4.4.2	Initial configuration with HSComm Ethernet	21
4.4.3	Initial Configuration with AT Commands.....	23
4.5	ETHERNET CONNECTION TEST	24
5	OPERATING MODES	26
5.1	COMMAND MODE (OFFLINE)	26

5.2	COMMAND MODE (TCP/UDP)	26
5.3	REMOTE CONFIGURATION	27
5.4	I/O TUNNELING	27
6	CONFIGURATION SOFTWARE HSCOMM ETHERNET	29
6.1	HELP	29
6.2	HSCOMM USER INTERFACE	29
6.2.1	Menus.....	29
6.2.2	Buttons.....	32
6.2.3	Status Bar	33
6.2.4	Tabs	33
7	FUNCTIONS AND THEIR CONFIGURATION	34
7.1	REMOTE CONFIGURATION VIA TELNET.....	34
7.2	BASIC SETTINGS	35
7.2.1	Serial interface	36
7.2.2	Handshake Configuration.....	36
7.2.3	Echo	37
7.2.4	DTR Behavior.....	37
7.2.5	Connection	38
7.2.6	Responses.....	38
7.2.7	Digital Inputs and Outputs	39
7.3	NETWORK / LEASED LINE OPERATION	39
7.3.1	IP settings.....	40
7.3.2	Input transfer (I/O tunneling).....	40
7.3.3	DNS settings.....	41
7.3.4	Remote maintenance.....	41
7.3.5	Leased line operation.....	42
7.4	MORE FUNCTIONS	42
7.4.1	Reset / Default / Factory reset.....	42
7.4.2	Address allocation via network command.....	43

7.4.3	IP block formation.....	44
7.4.4	Firmware flash update.....	48
8	ETHERNET COM DRIVER.....	49
9	AT COMMAND REFERENCE	50
10	RESPONSES AND NUMERICAL CODES	63

1 Introduction

Validity range of the manual

This user manual applies to all devices of the INSYS Ethernet 5.x series.

Purpose

This manual is directed primarily at technical staff, in particular:

- Programmers
- Implementers

Required basics

General knowledge regarding network technologies is required. We assume that the reader of this manual is familiar with basic general network technology terms, such as IP address, netmask or gateway. We refer to general information sources (e.g. www.wikipedia.com / Search for 'IP address').

Safety Instructions

This manual includes notes which must be observed in order to avoid material damage.

The warnings and cautions are described as follows:



Caution - Damage of components!

Not observing this note may result in destruction of the device.



Warning!

Failure to comply may result in malfunction.



Note

Notes contain important information which you should observe in particular.



Warning!

The device may only be used for the cases of application provided in the manual.

Online availability

The manuals are available in German and English at <http://www.insys-tec.de>.

Conventions

In the user manual, the devices of the INSYS Ethernet 5.x series are referred to as INSYS Ethernet. Only if there are differences between the devices will the complete device name be used.

Emphasis

Representation	Meaning
"Basic settings"	Software HSComm GUI texts, e.g. button, entry field, tab description
AT	AT command
<expression>	Entering of the parameter for an AT command
[expression]	Entering of the optional parameter for an AT command
OK	Response of an AT command

Additional documentation

The additional software offered from INSYS in this context will be delivered in electronic format, together with the relevant documentation.

Software HSComm

The software HSComm Ethernet is available for the configuration of the INSYS Ethernet. The following system requirements are necessary for HSComm:

- Windows 2000
- Windows XP

The configuration software is available for download at the following address:
<http://www.insys-tec.de>

Software VCOM Port

The software INSYS VCOM Port is available to establish a virtual COM port. This means that a PC application under Microsoft Windows can more or less address the serial interface on the INSYS Ethernet via a local COM interface that is connected ahead. The virtual COM port driver transforms the IP data into transparent data for the application.

The following system requirements are necessary for the INSYS VCOM Port:

- Windows 2000
- Windows XP

The virtual COM Port can be downloaded from the Internet:
<http://www.insys-tec.de>

Technical support

Reach the technical support at:

- E-mail: insys@insys-tec.de
- 0941/560061

Repurchasing of legacy systems


According to the new WEEE guidelines, the repurchasing and recycling of legacy systems for our clients is regulated as follows:

Please send those legacy systems to the following address, carriage prepaid:

Frankenberg-Metalle
Gärtnersleite 8
D-96450 Coburg

This regulation applies to all devices which were delivered after August 13, 2005.

2 Overview

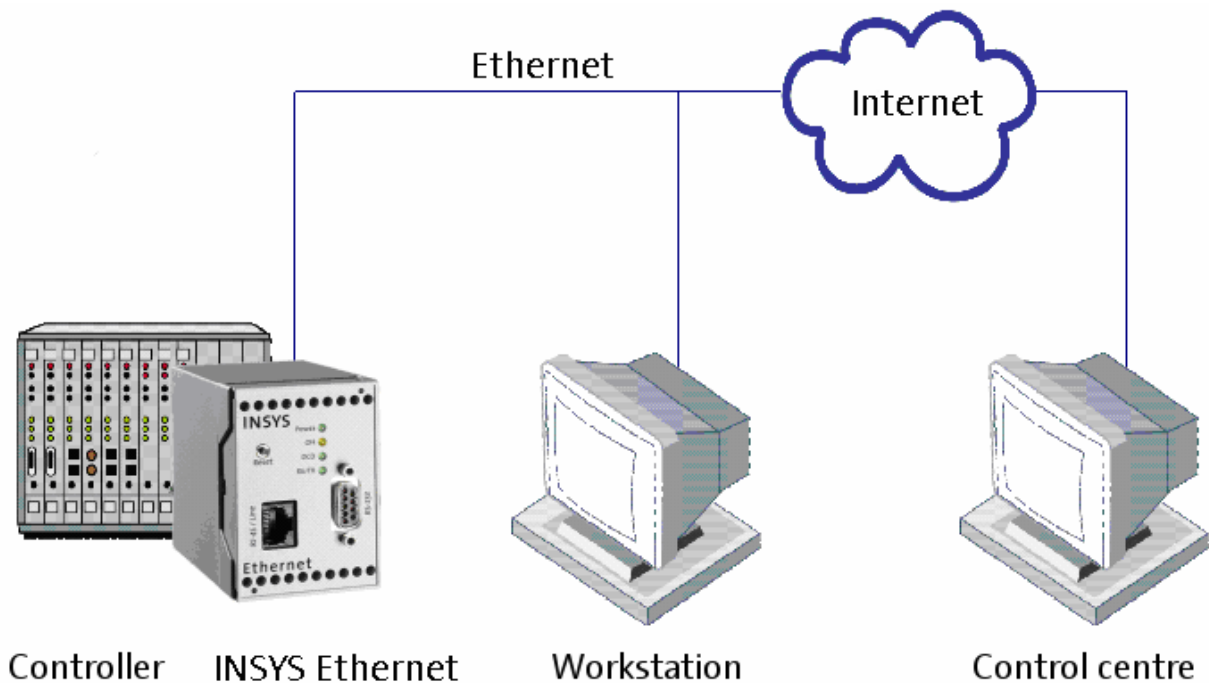

The INSYS Ethernet transparently maps a serial interface to an IP port. In connection with the virtual COM port driver, the INSYS Ethernet can simply replace a serial cable by an Ethernet connection in an application. Switching signals at the inputs can be transmitted to the outputs of another module.

Fields of application

The fields of application are, for example: remote maintenance, remote monitoring, remote configuration, remote switching, POS, MDE, time registration or decentralized data collection.

Configuration

The INSYS Ethernet can be configured easily using the configuration software HSComm, or directly via AT commands. The configuration can be performed locally at the serial interface as well as via the network.

2.1 Range of Functions

Interfaces, Display and Control Elements

- Mounting on DIN rail DIN EN 500 22
- Power supply, 10..60 V DC, 5% ripple, terminal

- Serial V.24/V.28 interface with 9-pin D-SUB jack and terminal level at V24 interface according to V.28
- Ethernet connection: 10Base-T on RJ45 an terminal
- 2 inputs, pull-up, terminal
- 2 switching outputs (potential-free relay), terminal
- Reset key and terminal
- 4 LEDs for status display

Communication

- Integrated TCP/UP stack for modem-compatible dialing of IP addresses or domain names, with transparent transfer of data from and to the serial interface ("TCP transparent").
- Protocols: ARP, ICMP, TCP/IP, UDP/IP, DHCP, DNS
- Hardware handshake (RTS/CTS) and software handshake (Xon/Xoff)
- Fixed speed setting
(300, 600, 1.200, 2.400, 4.800, 9.600, 19.200, 20.833, 38.400, 41.667, 57.600, 115.200)
- Extended data formats for the serial interface
(8N1, 8E1, 8O1, 8N2, 7E1, 7O1, 7N2, 7E2, 7O2)

Additional functions

- Extended AT command set (INSYS AT command for additional functions)
- Option to configure via TELNET (remotely) or RS232 (locally)
- Password protection for remote configuration
- Leased line function
- 3 configurable TCP block formation algorithms
- Firmware update of the μ controller (locally and remote)
- Idle connection control (Data Transmit Control)
- I/O tunneling, signal transfer input to output
- Keep Alive function
- PC configuration software HSComm Ethernet
- Support for the virtual COM port driver from INSYS MICROELECTRONICS GmbH.
- Hardware watchdog

2.2 Device History

In the course of the stipulated switch to ROHS-compliant products (EC directive 2002/95/EG), the production of the device series INSYS Ethernet 4.x and older is ended. The successor is the INSYS Ethernet 5.x. Besides switching to unleaded materials, this series also utilizes a new, powerful network processor.

The INSYS Ethernet 5.1 has an additional, internal SRAM (support starts with FW V1.22-SRAM). This is intended for further developments and has no special function at the moment.

Version	Additional functions
V1.00 - V1.04	Firmware porting to a new controller: <ul style="list-style-type: none"> ➤ Configurable CTS polarity (for RS485) ➤ Password-protected Telnet port ➤ IP configuration via DHCP (e-mail functions and autobaud are no longer supported)
V1.20	<ul style="list-style-type: none"> ➤ I/O tunneling (AT#IOT) ➤ IP via ARP / ping ➤ Leased line (AT&L<n>)
V1.21	<ul style="list-style-type: none"> ➤ DNS support ➤ Baud rate via AT+IPR
V1.22 V1.22 SRAM	<ul style="list-style-type: none"> ➤ Max IP packet size (AT#MSS) ➤ Individual value query ➤ End character for packet aggregation ➤ Software handshake

3 Technical Data

3.1.1 Mechanical characteristics

Weight	250 g
Dimensions (maximum)	w x d x h = 55 x 110 x 75
Temperature range	32°F..131°F
Protection class	Housing IP 40/ Terminal IP 20
Humidity	0 - 95% non-condensing

The following environmental conditions must be observed for the INSYS Ethernet.



Caution - Wet environment!

The INSYS Ethernet may not be used in wet environments.


3.1.2 Display elements

The INSYS Ethernet has four LEDs to display the operational status.


Name	Color	Off	On
Power	Green	No supply voltage	Supply voltage available
OH (Off Hook)	Yellow	No connection	Connection available or active
		AT&O0: OH lights up as soon as a physically functioning connection at the Ethernet connection is available (link ok, default)	
		AT&O1: OH lights up as soon as a connection is active	
DCD (Data Carrier Detect)	Green	No connection is established	Connection is established (Carrier detected)
RX/TX (receive/transmit)	Green	No data exchange	Data is sent or received

3.1.3 Terminal layout

Terminal row on the top of the cover:

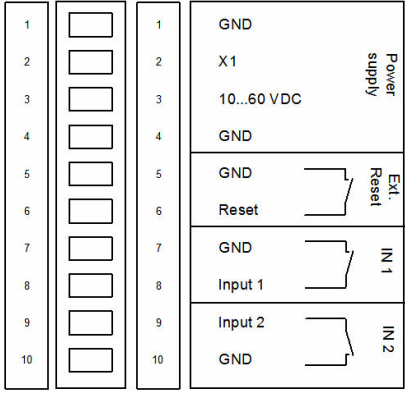					
	Terminal	Meaning			
1	GND	Ground			
2	X1	No function			
3	10..60V DC	Power supply 10V - 60V DC			
4	GND	Ground			
5	GND	Ground			
6	Reset	Reset input			
7	GND	Ground			
8	Input 1	Input 1			
9	Input 2	Input 2			
10	GND	Ground			

Terminal row on the bottom of the cover:

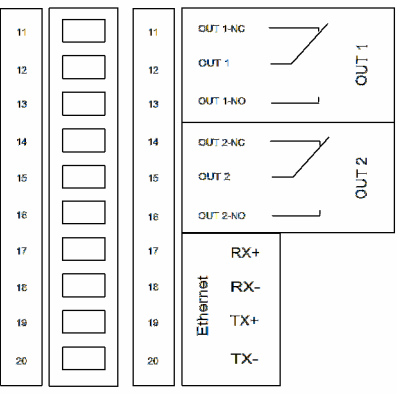					
	Terminal	Meaning			
11	OUT1NC	Output 1 normally closed contact			
12	OUT1COM	Output 1			
13	OUT1NO	Output 1 normally open contact			
14	OUT2NC	Output 2 normally closed contact			
15	OUT2COM	Output 2			
16	OUT2NO	Output 2 normally open contact			
17	Rx+	Receive path			
18	Rx-	Receive path			
19	Tx+	Send line			
20	Tx-	Send line			

3.1.4 Power supply

Power supply: 10..60 V DC (terminal 3)
(max. 5% ripple)

Power input: approx. 2W

Current consumption

Input voltage	Current (closed circuit)	Current (connection)	Maximum startup current
10 V DC	150 mA	150 mA	250 mA
24 V DC	70 mA	70 mA	120 mA



Caution - No overvoltage protection!

The INSYS Ethernet does not have a fuse.

Surges and excessive voltages may result in the destruction of the device.


3.1.5 Serial interface RS232 (V.24)

Serial interface RS232 (V.24), 9-pin SUB-D with threaded joint.

INSYS Ethernet interface speeds:

300, 600, 1.200, 2.400, 4.800, 9.600, 19.200, 20.833, 38.400, 41.667, 57.600, 115.200 bps.

Pin-out

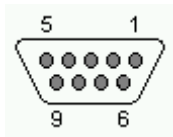

Pin	Description	Function	CCITT V.24	EIA RS232	DIN 66020	E/A DCE to DTE
1	DCD	Data Carrier Detect	109	CF	M5	O
2	RXD	Receive Data	104	BB	D2	O
3	TXD	Transmit Data	103	BA	D1	I
4	DTR	Data Terminal Ready	108	CD	S1	I
5	GND	Ground	102	AB	E2	
6	DSR	Data set ready	107	CC	M1	O
7	RTS	Request to send	105	CA	S2	I
8	CTS	Clear To Send	106	CB	M2	O
9	RI	Ring Indication	125	CE	M3	O

3.1.6 Digital inputs and outputs

Inputs and outputs can be set and queried via special AT commands. In remote configuration mode (Telnet), this will enable the query of certain system states and the switching of certain system functions.

The function I/O tunneling will transmit the switching state at the inputs of the INSYS Ethernet to the relay outputs of an additional INSYS Ethernet.

Input

The inputs (terminals 8 and 9) are designed as pull-up and are on HIGH in inactive, open state. The alarm inputs are activated by connecting to ground.

LOW	Active	0 to 1 V
HIGH	Inactive	4 to 12 V

The input current from LOW to internal +5 V is typically 0.5 mA.

Switch output


The switch outputs (terminals 11 to 16) are potential-free relay switches.

Maximum switch voltage:	30 V (DC)	42 V (AC)
Maximum current load:	1 A (DC)	0.5 A (AC)

3.1.7 Ethernet interface 10Base-T

The 10Base-T Ethernet interface is designed as RJ45 as well as screw terminal. The lines are connected internally according to the pin-out. A normal CAT5 cable must be used for the connection to a network switch/hub.

Pin-out

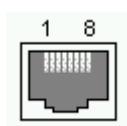

Terminal	Signal	Connection to RJ45
17	Rx+	3
18	Rx-	6
19	Tx+	1
20	Tx-	2



Note

When 2 Ethernet devices are directly connected, a twisted CAT5 cable must be used.

3.1.8 Reset

Pushing the reset via the key or via the screw terminal (bridge terminal 6 with GND) is identical.

Functions

- Connection fails (1 pulse 100 ms - 500 ms for data connection)
- Normal reset (continuous actuation, min. 3s)
- Factory reset: (3 pulse 100 ms to 500 ms)

3.2 Certifications

The INSYS Ethernet bears the CE symbol of conformity. This symbol is a declaration that on account of its design and implementation, the INSYS Ethernet is in compliance with the currently valid versions of the following EC directives:

Directives:	89/336/EEC (EMC directive) 73/23/EEC (Low voltage directive) 91/263/EEC (Directive for telecommunication devices)
Standards:	ETS 300 342 1 EN 60950 EN 55022 (class B) EN 55024 EN 300,607-1 EN 301 419-1 EN 3015011 V7.01 TBR 19, TBR 20
Approvals:	CE

4 Initial Operation

4.1 Scope Of Delivery

Check the scope of delivery before initial operation:

- INSYS Ethernet 5.x
- 9-pin serial cable for the connection between the PC and the INSYS Ethernet (RS232 cable)
- Printed manual (German/English).

Optional accessories:

- CD with configuration software HS Comm and manuals

Contact your supplier if the content is not complete.

Check the device for shipping damage. Please also refer to your supplier if anything is damaged.


Keep the packaging material for dispatch or storage.

The latest edition of the manual and the configuration software are available for download at our website: <http://www.insys-tec.de>.

4.2 Installation Overview

The serial interface (RS232) of the INSYS Ethernet and the configuration PC (not drawn in) are connected for initial operation and configuration.

For data communication during operation connect the terminal device with the application (e.g. a PLC) via the serial interface with the INSYS Ethernet (see figure).

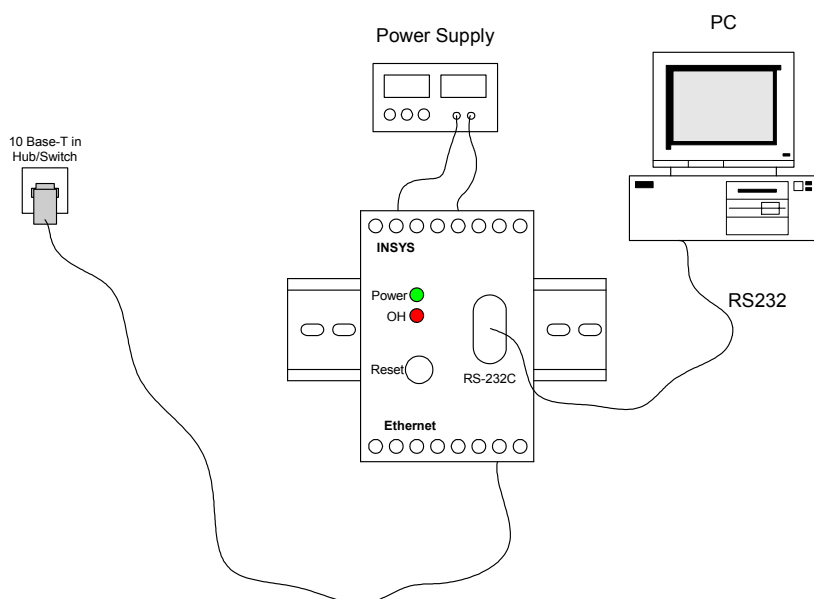

4.3 Mounting and Wiring

1. **Mounting on DIN rail:**
Mount the device on the DIN rail at a slight angle; to lock it into place, press the device at the bottom.
2. **Connecting the Power Supply:**
Terminal layout see Chapter 3.1.3.
3. **Switching the power supply on:**
The power LED will light up.
4. **Connecting to a network hub/switch or to another Ethernet device:**
To directly connect to an additional network participant (e.g. PC) a twisted CAT5 network cable must be used.
The OH LED will light up.
5. **Connection to the PC/terminal:**
Insert the supplied RS 232 interface cable at the cover front and connect it to a PC or terminal (e.g. terminal window of the configuration software HSComm or HyperTerminal, TeraTermPro, Telix, etc.).
Set the terminal program to 19200 baud and the data format to 8N1.
6. **Connection test RS232:**
Perform a short test via the terminal program. Enter the command "**AT**" and push the "Enter" key. When the message "**OK**" appears on your monitor, the RS232 connection has been successfully installed.

If the INSYS Ethernet has errors or behaves irregularly, please disconnect the power supply and the connection to the network. For those cases, please refer to your service partner. To protect your guarantee claims, please **do not** intervene with the INSYS Ethernet.

4.4 Initial Configuration of the IP Address

At delivery, the device has no IP address (IP: 0.0.0.0). In this state, no data exchange via the network is possible. You have the following options to set the network parameters at the INSYS Ethernet:

- **Manual IP address allocation:**
 - Direct input of a fixed IP address via the HSComm configuration software
 - Direct input of a fixed IP address via AT command in a terminal program
 - Remote configuration of a fixed IP address via ARP/PING command (see Chapter 7.4.2)
- **Automatic IP address allocation:**
 - DHCP activation via AT command in a terminal program
 - DHCP activation via HSComm configuration software

You may need to contact the responsible person for the IP network to clarify which kind of address allocation must be used.

Only with a correctly set network interface will the full range of functions be available. Besides data connections, also remote configuration or remote updates via Telnet will be available.

4.4.1 Brief introduction to IP

IP address and netmask

The IP address of a network device is a 32 bit numerical value for the detection of an individual device within a network and is in general displayed as 4 decimal numbers between 0 and 255, which are separated by full stops.

Example: IP 192.168.100.210

The IP address is composed of 2 pieces of information:

The network code and the device number within this network.

The NetMask (NM) defines which 4 digits belong to the network code and which to the device number. All digits which are allocated 255 in the NM belong to the network code. In most networks, the NM is set up as shown in the following example.

Example: IP 192.168.100.210
NM 255.255.255.0
→ Network 192.168.100.
Device 210

The NM should be the same for all participants of a local network segment. This also applies to the first part of the IP address which indicates the network code.

The device number, however, must be allocated individually.

Example: NM 255.255.255.0
Device A 192.168.100.210
Device B 192.168.100.211
Device C 192.168.100.212



Note

In private networks, only certain, specially reserved address ranges should be used as network codes (e.g. 192.168.xxx.xxx) to avoid any possible address conflicts in connection with the Internet from the beginning.


The device numbers 0 and 255 are reserved addresses and should not be used as subscriber addresses.

Gateway and routing

If data must be sent beyond the limits of a local network to a destination in another segment (different network code), a **Gateway (GW)** must be defined via a gateway address, which is located within the local network segment. A gateway is a device with two network interfaces which acts as an exchange station between the network segments.

If a device detects that the destination address is not located in the own, local segment (comparison of the own IP with the destination IP via NM), the packet is instead sent to the GW. The GW will route the packet accordingly, i.e. will send it to the second network segment connected to the GW.

The network settings of a PC can easily be queried using the command '**ipconfig**' in the DOS box:

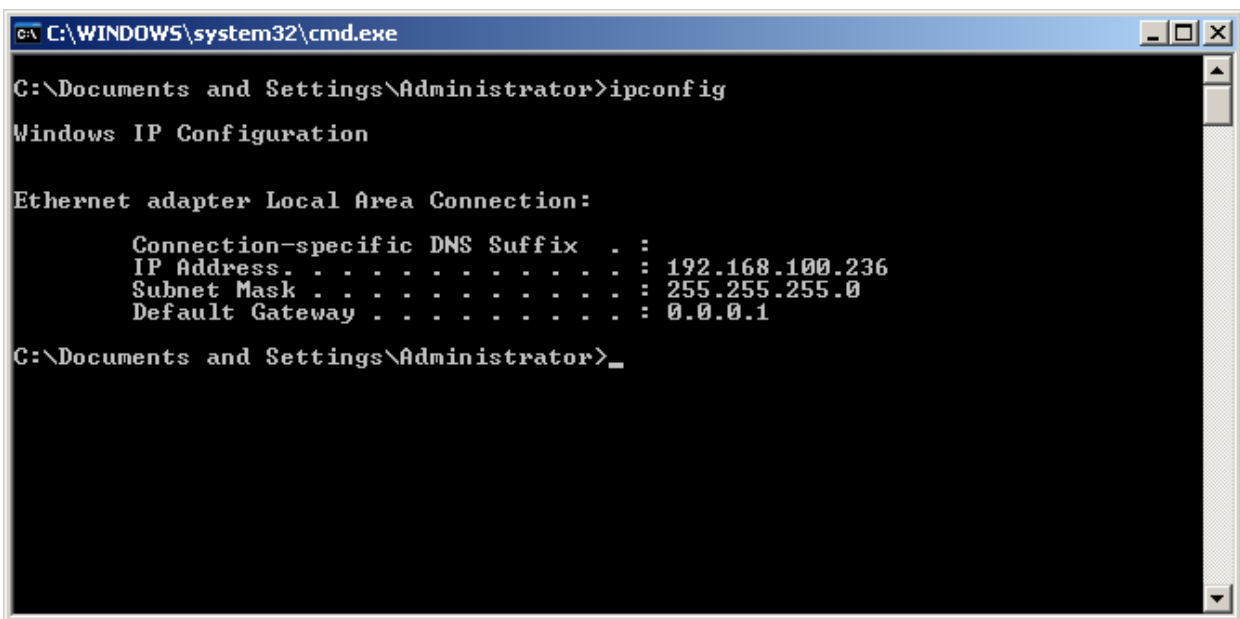

```
C:\WINDOWS\system32\cmd.exe
C:\Documents and Settings\Administrator>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . .               : 192.168.100.236
    Subnet Mask . . . . .             : 255.255.255.0
    Default Gateway . . . . .         : 0.0.0.1

C:\Documents and Settings\Administrator>_
```

More information regarding the topics IP addresses and routing can be found at <http://en.wikipedia.org/> Search for the term 'ip address'.



Note

When the parameters are automatically allocated via DHCP, an active DHCP server with an appropriate configuration must be available in the network. The DHCP server allocates the IP address to the INSYS Ethernet automatically after each restart.



Warning!

In the case of manual parameter allocation, the selected address, Net-mask and the gateway must match the local network segment, in which the INSYS Ethernet is located. An IP address that already exists in the network may not be re-allocated!


When integrating the INSYS Ethernet into a company network, the responsible network administrator must be consulted. It manages the IP addresses or configures the DHCP server, if required.

4.4.2 Initial configuration with HSComm Ethernet

As alternative to the configuration via HSComm, the device may also be configured via AT commands (see Chapter **Fehler! Ungültiger Eigenverweis auf Textmarke.**)

Program start

- Start the program HSComm Ethernet under Windows: Start→All Programs→INSYS→HSComm→HSComm Ethernet
- The configuration software displays the window 'Basic settings' and searches the set interface with the previously used settings (default = COM1, 19200, 8N1) for a connected INSYS Ethernet.

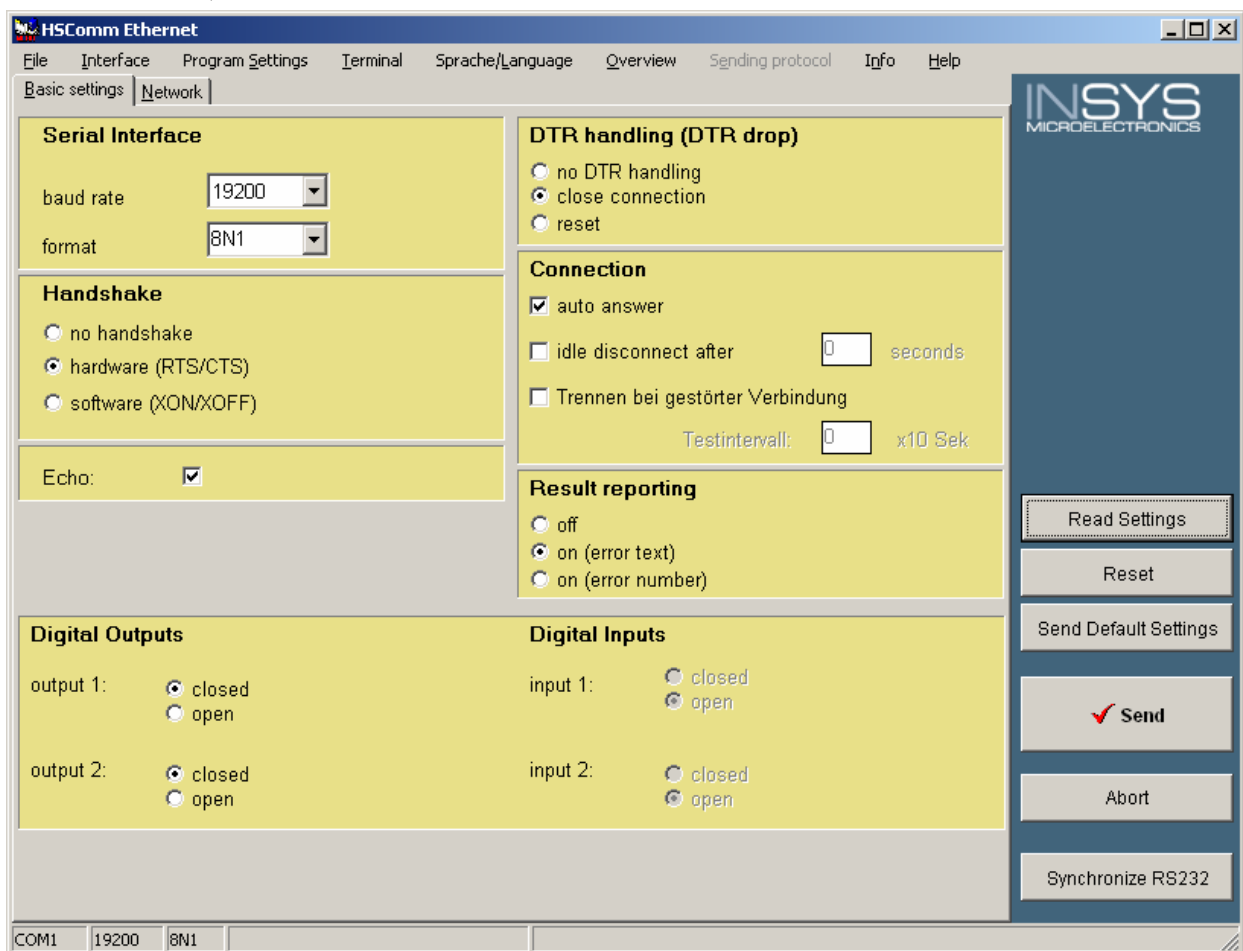

IP configuration

- Switch to the window 'Network/Leased line operation'.
- Set the required network parameters in the field 'IP settings' or activate the DHCP. (in case of doubt please consult your responsible network administrator.)
- Use the button 'Send' to transmit the set parameters to the INSYS Ethernet.

HSComm Ethernet

File Interface Program Settings Terminal Sprache/Language Overview Sending protocol Info Help

Basic settings Network

IP Settings

☐ get IP address from DHCP server

IP address: 192 . 168 . 100 . 210

port: 1234

net mask: 255 . 255 . 255 . 0

gateway: 0 . 0 . 0 . 0

default protocol: ☒ TCP ☐ UDP

Remote Configuration

password/user name:

☐ change password/user name

☒ allowed (default port: 23)

Transfer IO status to partner device

☐ on

IP address: 0 . 0 . 0 . 0

port: 0

DNS Server

DNS Server 0: 0 . 0 . 0 . 0

DNS Server 1: 0 . 0 . 0 . 0

Leased line mode

☐ leased line active

☒ IP address: 0 . 0 . 0 . 0

☐ Domain name:

port:

Read Settings

Reset

Send Default Settings

Abort

Synchronize RS232

COM1 19200 8N1

Troubleshooting

If the INSYS Ethernet is not correctly detected, an error message is displayed a few seconds after the program start.

- Check the connection cable.
- Select the according serial interface at the configuration PC in the menu 'Interface'.
- Click the button 'Read' in the right bar of the program window.

- Click the button 'Synchronize RS232' to automatically adjust the baud rate and the data format.
- As a precaution, reset it to the factory settings using the button 'Send default values'.
- As an alternative, you may also trigger a factory reset by pushing the reset key (100..500 ms) three times. Perform the function 'Synchronize RS232' afterwards.

4.4.3 Initial Configuration with AT Commands

You can perform the initial configuration alternatively with the software HSComm as described in the previous chapter.

- Start your terminal program (or the terminal window of HSComm) using the following interface settings: 19200, 8N1.
- Allocate a fixed IP address via AT commands:
Example: **AT#IP=192.168.100.210**
AT#NM=255.255.255.0 (usually not required, as it is already set as default)
- As an alternative you may activate the automatic address allocation via DHCP using **AT#DHCP=1**. You will need a DHCP server in the LAN.
- Restart the INSYS Ethernet using **AT#RBT** or the reset key.
- Check the settings with **AT#V**.

Troubleshooting

If the device is not reacting, please do the following:

- Check the connection cable. For notebooks with USB/RS232 adapters there may be problems with the configuration. In this case, use a PC with a direct RS232 interface.
- Check the interface settings (port, 19200, 8N1) of your terminal program.
- Check if the COM interface is already being used by another program. In this case, close the program or restart the computer, if necessary.
- Trigger a factory reset by pushing the reset key (100..500 ms). Repeat the configuration.

If you experience problems, please contact your support department (see Chapter 1).


4.5 Ethernet Connection Test

After a successful initial configuration you can easily determine if your INSYS Ethernet is accessible in the network.

Open the prompt of a PC (DOS box). The PC must be in the same local network.

Execute the following command: **ping x.x.x.x** (x.x.x.x = configured IP address)

When the ping is responded to (see figure), a connection with the network has been established.

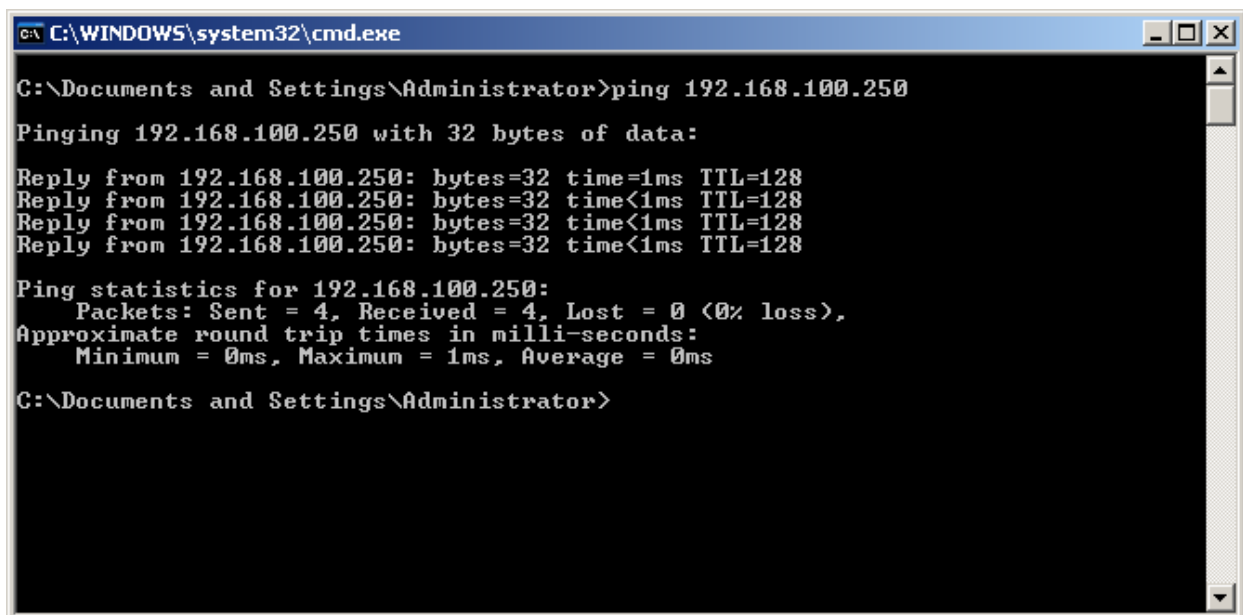

```
C:\WINDOWS\system32\cmd.exe

C:\Documents and Settings\Administrator>ping 192.168.100.250

Pinging 192.168.100.250 with 32 bytes of data:

Reply from 192.168.100.250: bytes=32 time=1ms TTL=128
Reply from 192.168.100.250: bytes=32 time<1ms TTL=128
Reply from 192.168.100.250: bytes=32 time<1ms TTL=128
Reply from 192.168.100.250: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.100.250:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Documents and Settings\Administrator>
```

Troubleshooting

If the ping command delivers no responses, the following items must be checked:

Wiring:

- Are all cables plugged in?
- Is the OH LED at the INSYS Ethernet flashing?
- Are the network LEDs at the PC and the hub/switch flashing?
- Were the correct cables used?
(twisted CAT5 cable for a direct connection between a PC and the INSYS Ethernet without hub/switch)

Network settings (see Chapter 4.4.1):

- Has the IP address already been allocated to another device? Unplug the network cable, repeat the ping ... is there a response?
- If the PC and the INSYS Ethernet are located in the same local network segment, then the network codes must be identical and the device numbers must be different.
- If the PC and the INSYS Ethernet are located in different networks, which are connected through a gateway (e.g. router), then the PC as well as the INSYS Ethernet must have the according local IP address of the gateway registered. The GW address must be in the same local network segment.
- Firewalls and routers may block certain protocols, address ranges, ports, etc.

In case of doubt please consult your responsible network administrator.

5 Operating Modes

5.1 Command Mode (Offline)

The device is offline during command mode, i.e. there is no IP connection and it can be addressed via AT commands.

After the INSYS Ethernet was switched on or after a reset, the device will automatically be in command mode.

Use the commands **ATT** and **ATU** in command mode to define the type of the next connection mode (TCP or UDP). Only incoming connections with the set protocol type will be accepted. If no protocol was specified for an outgoing connection, the same setting will apply.

Changing the mode

When an online data connection (TCP/UDP) is established, the command mode is ended. A data connection can be established as follows:

- Manually outgoing connection (AT command: **ATD...**)
- Automatically outgoing connection (configuration: leased line operation)
- Manually incoming connection (AT command: **ATA**)
- Automatically incoming connection (configuration: **ATS0=1**)

After the connection is terminated, the command mode is re-activated.

5.2 Command Mode (TCP/UDP)

The device is online. Data from the RS232 interface is transmitted to the remote terminal via Ethernet and vice versa. AT commands are now only accepted via remote configuration, but not via RS232.

Changing the mode

When the online data connection is terminated, the command mode is activated. The data connection can be terminated as follows:

- Disconnect via the remote terminal on TCP level
- Escape sequence <pause>+++<pause> via RS232
- Deactivate the DTR control line (**AT&D**)
- Trigger the idle connection control (**AT#DTC**)
- Detect a connection error (**AT#KEEP**)
- Short one-time pulse on the reset line
- Real reset (>3s)

Important information regarding UDP connections

TCP protocols have a connection management, whereas for UDP protocols the data packets are simply dispatched to the network. The UDP protocol does not confirm if the data was actually received by the recipient. For UDP it may also occur that sent data packets arrive at the recipient in a different order (due to routing). The user protocol resting on UDP would need to accept all these tasks.



Note

It is therefore recommended to favor TCP to UDP connections wherever possible.

However, if a UDP connection is inevitable, note the following.

An empty UDP packet is sent during the outgoing UDP connection setup (**ATD**) to indicate the connection request to the remote terminal.

For an incoming connection request, each UDP packet will cause the output of the message RING, either until the connection is automatically accepted (**ATS0=<n>**) or until it is manually accepted with **ATA**.



Note

For the connection of two INSYS Ethernet, both devices must be set to **ATU**.

To terminate the UDP connections between two devices, the escape sequence (<pause>+++<pause>) must be entered on **both** sides to switch the modules from data to command mode.

As the escape characters are also transmitted to the recipient, it is possible for UDP connections that the +++ sequence of module #2 will trigger **RING** at module #1 which is already in command mode. If **ATS0=1** is set at module #1, this will automatically result in the connection acceptance being repeated.

The value for **ATS0** should therefore be larger than 3. The optimum manual connection acceptance is performed with **ATS0=200** and **ATA**.

If larger amounts of data are sent via UDP and the receiving module does not manage to output the data at the serial interface in time, this may result in malfunctions despite a good UDP connection. The network-side recipient buffer will overflow without the recipient being able to indicate an interval signal to the sender.

5.3 Remote configuration

In addition to the offline command mode, the INSYS Ethernet can also accept all AT commands via Telnet remote configuration.

This function is available offline, or online for an existing data connection.

Please find a detailed description of this function in Chapter **Fehler! Verweisquelle konnte nicht gefunden werden..**

5.4 I/O Tunneling

In this operating mode, the signals at the inputs of an INSYS Ethernet are automatically transmitted to the outputs of a second INSYS Ethernet.

This function is available offline, or online for an existing data connection (only TCP!).

Please find a detailed description of this function in Chapter **Fehler! Verweisquelle konnte nicht gefunden werden..**

6 Configuration Software HSComm Ethernet

The software HSComm provides the opportunity to configure the INSYS Ethernet under Windows without explicit knowledge of the AT commands.


The free configuration software HSComm can be downloaded at: <http://www.insys-tec.de>.

6.1 Help

The context sensitive help is available any time via the key **F1** or the "Help" menu.


6.2 HSComm User Interface

The HSComm Ethernet user interface provides menus, registries and buttons which are described in the current chapter, together with their mode of operation. The according chapters of "Functions and their configuration" will show how to configure the individual functions.

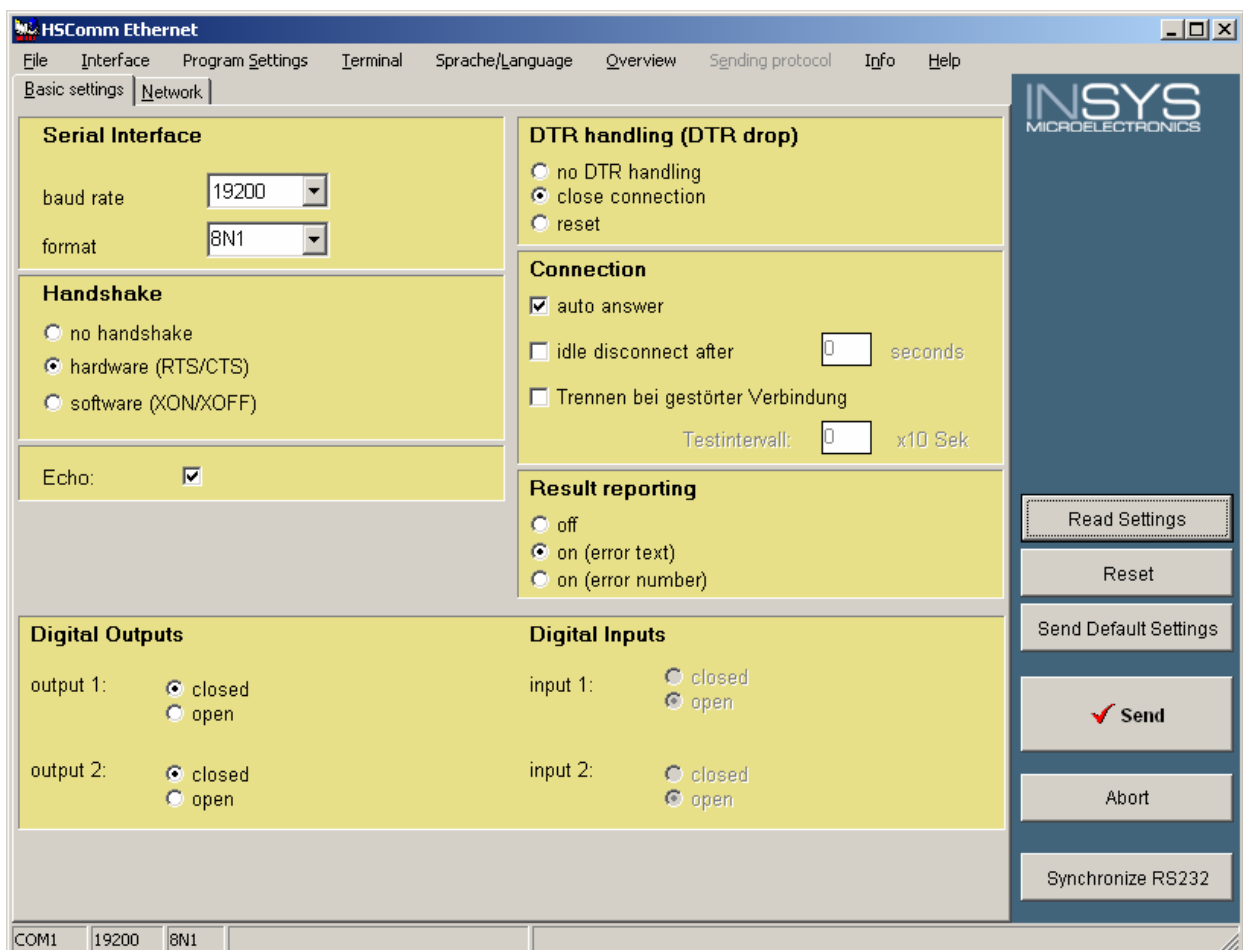

6.2.1 Menus

 The HSComm Ethernet includes the following menus:




File

Use the menu item "File" to save the current settings as shown in the HSComm user interface as a file, or to re-read the settings.

Interface

Use the menu item "Interface" to set the serial interface of the configuration PC. Access to the INSYS Ethernet is possible via the serial interface or via Telnet.

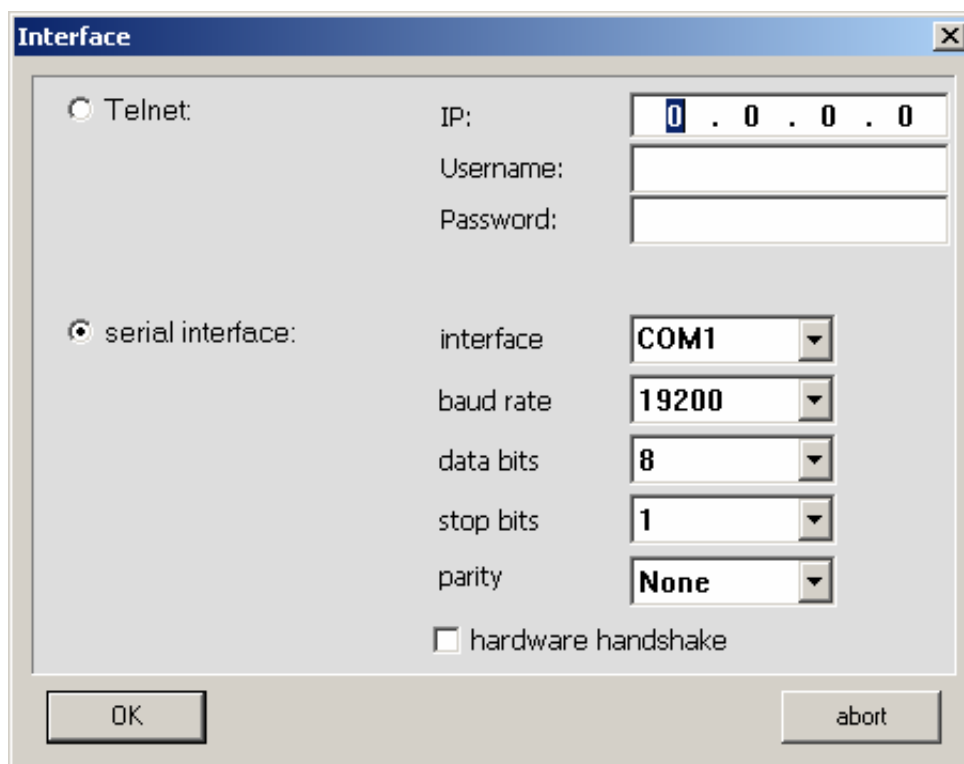

Note

The Telnet interface can only be used when the INSYS Ethernet has already been configured with the correct network parameters (see Chapter 4.4).




Note

The interface parameters of the configuration PC must match the interface parameters of the INSYS Ethernet.

Program settings

When "Automatic detection at program start" is activated, the HSComm detects the INSYS Ethernet as soon as it is connected. The device is immediately read out by the software. The button "Read values" does not need to be activated.

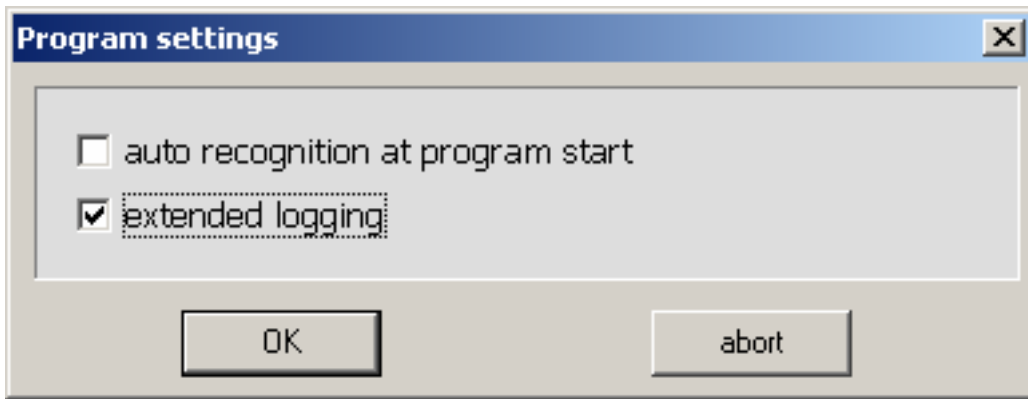

Activate "Advanced logging" to create a log if errors occur during the configuration. You can open the protocol at the menu item "Send protocol".

Terminal

You can use the terminal window to track which AT commands were sent to the INSYS Ethernet and which responses were returned. You can also send **AT** commands directly to the INSYS Ethernet.

Language

Use the menu item "Language" to switch between the interface languages German and English.

Overview

Use the menu item "Overview" to clearly display all current HSComm settings. The output covers several screen pages.

You may save the overview as text file.



Note

Have the overview available when you call the hotline!

Transmission Protocol

See Advanced logging at the menu item "Program settings".

Information


Besides the version information of the HSComm Ethernet, the firmware number of the connected INSYS Ethernet can also be displayed.

Help

The context sensitive help is available any time via the key **F1** or the "Help" menu.

6.2.2 Buttons

Use the buttons to start data transmissions between the INSYS Ethernet and the configuration PC. During the data transmission a progress bar will be displayed above the buttons. All inactive buttons are highlighted in gray.

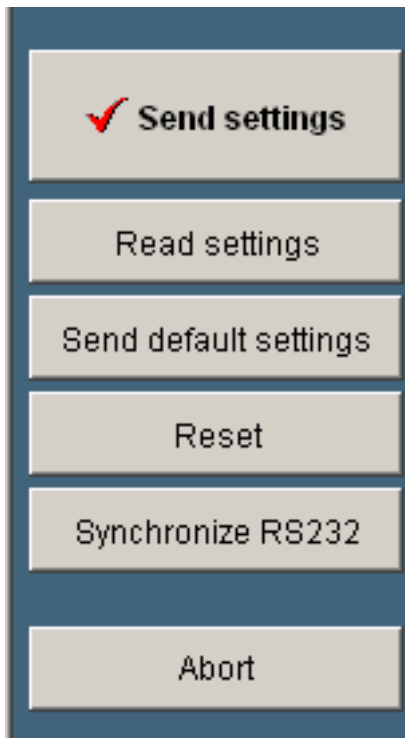

Read

Use this button to read the current settings from the INSYS Ethernet. The current settings are now displayed in the HSComm.

Reset

Use this button to restart the INSYS Ethernet.

Default settings

Use this to load the factory settings into the INSYS Ethernet. Afterwards, a restart is performed.

Send

Use this button to transmit the current settings in the HSComm to the INSYS Ethernet.

Abort

Use this button to cancel running data transmissions, e.g. for "Send" or "Read".

Synchronize RS232

The serial interfaces of the INSYS Ethernet and the configuration must be configured equally.

Use the button "Synchronize RS232" to test all possible baud rate and data format settings at the PC side until both sides match.

6.2.3 Status Bar

The status bar at the lower window border of the HSComm displays the setting and activities of the serial interface of the configuration PC.

The LEDs RX and TX of the INSYS Ethernet light up synchronously during the receiving and sending of data.

6.2.4 Tabs

The settings of the basic and extended settings are spread across several tabs, which can be selected via the tab titles.



The performed settings will only be transmitted to the INSYS Ethernet when you click on the button "Send".

The individual functions are described in detail in the Chapter "*Functions and their configuration*".

7 Functions and their Configuration

The functions of the INSYS Ethernet can be configured easily using the configuration software HSComm, or directly via AT commands and a terminal program. For both options, remote access via Ethernet (Telnet connection) will be available besides the serial interface. The configuration via the serial interface is only available in command mode, whereas the Telnet interface allows the entry of AT commands also during an existing Ethernet data connection.



Note

The exact syntax of the AT commands described in this chapter can be found in the chapter *Fehler! Ungültiger Eigenverweis auf Textmarke..*



Note

If the **AT** command is switched off via RS232 using **AT&X1**, the TELNET configurator is the only possibility to set the module.

7.1 Remote Configuration via Telnet

For remote configuration, start a Telnet terminal on a network PC and connect it to the Telnet port (23) of the INSYS Ethernet. After the password was queried (default: insys/insys), you will be in remote configuration mode. All available **AT** commands can be entered. This also allows for a remote update of the firmware or for a connection setup.



Note

Some Telnet programs will try to negotiate several terminal options with the INSYS Ethernet during the connection setup. The INSYS Ethernet will already rate these bytes as user name and display them as '*'.

In this case, the user must either repeat the login or use another Telnet terminal.

For some programs, this option may also be turned off. (Example TeraTerm: remove the TELNET checkmark for TCP/IP connection setup)



Note

Access via Telnet connection is only possible if the network parameters were set correctly.

**Note**

If the AT command mode at the serial interface was deactivated with **AT&X0**, Telnet access is the only access option.

**Note**


For operational safety reasons, an existing Telnet remote configuration is terminated as soon as a new Telnet connection to the INSYS Ethernet is established.

As TELNET terminal for control functions via **AT** commands, INSYS MICROELECTRONICS recommends TeraTerm by T. Teranishi. The free software can be downloaded at <http://www.vector.co.jp/authors/VA002416/teraterm.html>.

Pertinent AT commands	
AT#TLU="<User name>"	User name for the Telnet connection (default = insys)
AT#TLP="<Password>"	Password for the Telnet connection (default = insys)
AT#TEL=<n>	Telnet port number (default = 23)

7.2 Basic Settings

The basic settings of the RS232 interface can be configured in the Software HSComm on the tab "Basic settings".

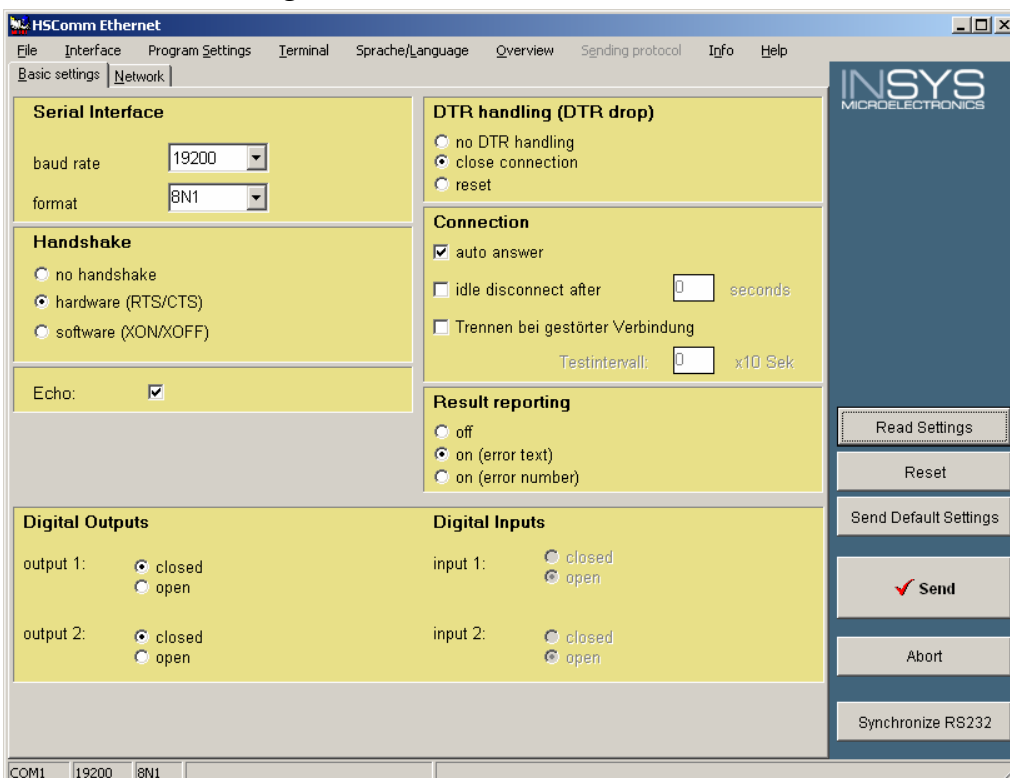

7.2.1 Serial interface

Set the parameters for the serial interface of the INSYS Ethernet.

Select the requested values in the fields "Baud rate" and "Data format".

**Note**

The interface parameters of the configuration PC must match the interface parameters of the INSYS Ethernet.
Set the serial interface of the configuration PC at the HSComm menu item "Interface".

**Note**

With the command **AT*S<n>** special baud rates may be set, which may lead to communication problems.
If, by mistake, one of these settings was set permanently, you will need to use the reset key to set the device to factory defaults.

Pertinent AT commands	
AT*S<n>	Baud rate of the serial interface
AT*U<n>	Data format of the serial interface

7.2.2 Handshake Configuration

The handshake controls the data flow at the serial interface. If more data is sent than the INSYS Ethernet or the connected data terminal can process, the data flow is stopped to avoid a buffer overflow (data loss).

No handshake

This setting should only be used for devices which do not support handshake.

**Note**

Without handshake there is a risk of data loss. Waiting data is simply sent without considering the readiness of the remote terminal.
If the buffer overflows, a reduced data rate may be helpful, if necessary.

Hardware handshake

The INSYS Ethernet controls the data flow via the separate control lines RTS/CTS.

Software handshake

The INSYS Ethernet controls the data flow with the help of control characters (XON: 0x11 / XOFF: 0x13) via the data lines.

**Note**

Use the software-controlled data flow control only for the transmission of ASCII data. If binary data is transmitted, make sure that the control characters are not included in the data stream.

Pertinent AT commands	
AT&K<n>	Handshake

7.2.3 Echo

With echo, all commands which are transmitted to the INSYS Ethernet via the serial interface are returned at the serial interface. This enables you to read the AT commands during terminal operation.

Pertinent AT commands	
ATE	Command echo

7.2.4 DTR Behavior

The control line DTR of the serial interface indicates whether a device (configuration PC, controller) is connected with the INSYS Ethernet and is active. The setting controls the behavior when the DTR signal is missing, e.g. when the terminal device (PC, controller) is disconnected.

No DTR behavior

The INSYS Ethernet does not utilize the DTR signal. This setting must be used during stand-alone operation (I/O tunneling) or for connections with devices which do not support DTR.

Disconnect connection

The INSYS Ethernet terminates the existing connection, if the DTR signal is missing.

Reset

The INSYS Ethernet terminates the existing connection, if the DTR signal is missing and performs a restart.

Pertinent AT commands	
AT&D<n>	Function type of the control line DTR

7.2.5 Connection

Automatic connection acceptance

This function is used to set if incoming connection requests (UDP packets, TCP/SYN packets) are accepted, or if the INSYS Ethernet allows only outgoing connections.

Terminate after idle status

The idle connection control is a function to monitor the data transmission during online operation. It is used to autonomously terminate a connection after a set period of time.

Termination for interrupted connections

The existing data connection is checked with a special test protocol (KeepAlive) at a set interval. If there is no response from the remote terminal after 5 successive test signals, the connection is terminated.

Pertinent AT commands	
ATS0=<n>	Automatic connection acceptance
AT#DTC=<n>	Idle connection control after <n> seconds
AT#KEEP=<n>	KeepAlive connection test; every <n> second

7.2.6 Responses

The responses, with which the INSYS Ethernet replies to AT commands can be displayed in short form (number codes) or long form (plain text), or may be switched off altogether. Please find a table with all possible messages in Chapter 9.

Pertinent AT commands	
ATV<n>	Message format short or long
ATQ<n>	Send/suppress responses

7.2.7 Digital Inputs and Outputs

The digital inputs and outputs of the INSYS Ethernet can be queried or set. The two switching outputs OUT1 and OUT2 at the bottom of the cover are designed as potential-free relay switches. This enables a user to operate a machine switch via Telnet remote access.

The function I/O tunneling can be used to transmit the inputs of an INSYS Ethernet to the outputs of another device (see Chapter 0).

Pertinent AT commands	
AT*y<n> ,<m>	Switching the output <n> to condition <m>
AT*I<n>	Query of the input <n>

7.3 Network / Leased Line Operation

The settings of the Ethernet interface and the leased line operation of the INSYS Ethernet can be configured in the software HSComm in the according tab.

The screenshot shows the 'HSComm Ethernet' configuration window with the 'Network' tab selected. The window is divided into several sections for configuring network parameters and leased line mode.

IP Settings

- ☐ get IP address from DHCP server
- IP address: 192 . 168 . 100 . 210
- port: 1234
- net mask: 255 . 255 . 255 . 0
- gateway: 0 . 0 . 0 . 0
- default protocol: ☒ TCP ☐ UDP

Remote Configuration

- password/user name: [configure]
- ☐ change password/user name
- ☒ allowed (default port: 23)

Transfer IO status to partner device

- ☐ on
- IP address: 0 . 0 . 0 . 0
- port: 0

DNS Server

- DNS Server 0: 0 . 0 . 0 . 0
- DNS Server 1: 0 . 0 . 0 . 0

Leased line mode

- ☐ leased line active
- ☒ IP address: 0 . 0 . 0 . 0
- ☐ Domain name: []
- port: []

Buttons (Right Side):

- Read Settings
- Reset
- Send Default Settings
- Send (with a red checkmark icon)
- Abort
- Synchronize RS232

Status Bar (Bottom): COM1 | 19200 | 8N1

7.3.1 IP settings

IP address, NetMask, Gateway, DHCP

The network parameters of the INSYS Ethernet can either be allocated, or received dynamically from a DHCP server in the network.

Please find a short introduction to this topic in Chapter 4.4.1.

Port

The set default port address indicates at which port the INSYS Ethernet waits for incoming connections. If for outgoing connections no explicit port number is specified with the **ATD** command, the default port setting will be used.

Default protocol

The set default protocol indicates with which protocol (TCP or UDP) the INSYS Internet will wait for incoming connections. Connection requests from other protocol types will be ignored. If no explicit protocol is specified for outgoing connections in the command **ATD**, the default setting will be used.

Pertinent AT commands	
AT#IP=<ip address>	Set IP address
AT#NM=<ip address>	Set NetMask
AT#GW=<ip address>	Set gateway address (must be in the same segment)
AT#PORT=<n>	Default port for incoming and outgoing connections
ATT	Default protocol for incoming and outgoing connections
ATU	Default protocol for incoming and outgoing connections is UDP
AT#DHCP=<n>	Automatic parameter allocation via a DHCP server

7.3.2 Input transfer (I/O tunneling)

The function I/O tunneling allows for transmitting the signals from the INSYS Ethernet transparently to the outputs of a second INSYS Ethernet.

It is necessary for the transmission that at the two involved devices the set combination of destination address and destination port equal the according address and the port of the remote terminal. At both devices, the transfer function must be activated.

The transmission of the inputs to the remote terminal takes place via UDP packets. The UDP packets are automatically sent every 30 seconds, or within 1 second if changes occur at the inputs. They include the status of the two alarm inputs UE and UE2. The remote terminal processes the packets and sets its outputs UA and UA2 accordingly. It is thus possible to transmit 2 I/O lines from one device to another one in a simple way.

The transmission of the IO signals via UDP takes place in the background and is independent from a TCP data connection that may exist parallel.



Note

A UDP connection is not possible in connection with IO tunneling.

Pertinent AT commands	
AT#IOT=<n>	Activate I/O tunneling
AT&Z1=<ip address>:<port>	Address and port of the remote terminal

7.3.3 DNS settings

When using a DNS server in the network, for some functions domain names in plain text can be specified for certain functions instead of IP addresses. Before the actual connection setup, the domain name will translate the domain name to the INSYS Ethernet.

Pertinent AT commands	
AT#DNS<n>=<ip address>	Define the DNS server
ATD"<domain name>":<port>	Connection setup with domain name
AT#PING"<domain name>"	Ping connection test with domain name
AT&Z0="<domain name>":<port>	Leased line setup with domain name

7.3.4 Remote maintenance

The remote maintenance option described in Chapter 5.3 accepts all **AT** commands (also firmware update). The remote maintenance is password-protected and may also be completely deactivated.



Note

Access via Telnet connection is only possible if the network parameters were set correctly.



Note

If the AT command mode at the serial interface was deactivated with **AT&X0**, Telnet access is the only access option.

Pertinent AT commands	
AT#TLU="<Username>"	User name for the Telnet connection (default = insys)
AT#TLP="<Password>"	Password for the Telnet connection (default = insys)
AT#TEL=<n>	Telnet port number (default = 23) or deactivating the remote maintenance

7.3.5 Leased line operation

In leased line operation, a permanent connection to a defined remote terminal is maintained. If this connection is interrupted at any time, the system will automatically attempt to establish a new connection every 20 seconds.

The function just needs to be activated at one of the two devices involved in the leased line. The other device must be configured for automatic connection acceptance (**ATS0=n**).

For the stability of the connection it is also advisable to activate the KeepAlive function (see Chapter **Fehler! Verweisquelle konnte nicht gefunden werden.**) on both sides.

Pertinent AT commands	
AT&L<n>	Activate the leased line operation
AT&Z0="<ip address>" :<port>	Definition of the remote terminal
ATS0=<n>	Automatic connection acceptance
AT#KEEP=<n>	Function check of the existing data connection

7.4 More Functions

The functions described in the following paragraph can not be performed with the PC configuration software HSComm.

7.4.1 Reset / Default / Factory reset

Reset

When a reset is performed (device is switched on, reset key, **AT#RBT**), the last profile that was stored using **AT&W** is loaded.

Reset options:

- Device is switched on
- Reset key or terminal
- **AT** command: **AT#RBT**
- **AT** command: **ATZ**

Default settings

The default settings (defaults) are loaded with the command **AT&F**.

Use the command sequence **AT&F&W** to put the device back into default state (&F resets the current settings and &W stores these settings in the fail-safe memory). All settings that can be stored with **AT&W** are affected by **AT&F**. The network settings will not be affected, because otherwise the INSYS Ethernet could not be reached via Telnet afterwards.

The following AT settings are stored using **AT&W**:

AT&C, AT&D, AT#DTC, ATE, AT&K, AT&L, AT&O, ATQ, AT#QUIET, AT&R, ATS0, ATS2, ATS8, ATS12, AT*S, AT&S, ATT/ATU, AT*U, ATV, AT&X, AT*Y

Factory reset

Push the reset key 3 times to reset all settings and network parameters.

Pertinent AT commands	
AT#RBT	Reboot, stored settings are loaded
AT&F	Put active settings into default state
AT&W	Store active settings

7.4.2 Address allocation via network command

The IP address of the INSYS Ethernet can also be set manually via remote network access. The prerequisite is that the IP address of the INSYS Ethernet is set to 0 . 0 . 0 . 0 and DHCP (automatic network configuration) is switched off.

To be able to uniquely address the INSYS Ethernet, the configuration PC must first be informed about the MAC and the desired IP address of the INSYS Ethernet.

Afterwards, the INSYS Ethernet is addressed with the ping command. PING sends several packets to the module. The first packet is used to set the IP address of the INSYS Ethernet and is discarded (output "timeout" or similar). All further packets will be properly responded to.

Windows

Switch to the prompt or to the DOS mode.

```
arp -s a.b.c.d 00-05-b6-xx-yy-zz
ping a.b.c.d
```

Linux, Unix

```
arp -s a.b.c.d 00:05:b6:xx:yy:zz
ping a.b.c.d
```

- "a.b.c.d" indicates the required IP address of the INSYS Ethernet, e.g. 192.168.100.17
- "00-05-b6-xx-yy-zz" is the MAC address of the INSYS Ethernet.



Note

The MAC address is unique for each INSYS Ethernet and is stated on the label. All MACs of the INSYS devices start with 00-05-b6. The 3 additional hexadecimal numbers "xx-yy-zz" are different for each INSYS Ethernet and help to distinguish various devices in a network.

**Note**

For most systems, the command „arp“ can only be performed by the user „root“.

**Note**

The Windows command line entry interprets entries for numeral values with a leading '0' as octal numbers.

E.g. ping 192.168.100.015 actually goes to the host .13


Reason: octal '15' = decimal '13'

It is also advisable not to use leading zeros for ping, Arp, Telnet or similar commands.

7.4.3 IP block formation

The INSYS Ethernet maps a serial interface on an Ethernet port. In simple words: a serial cable (or a modem connection) is replaced by an Ethernet connection.

However, there is a significant distinction between the two transmission types: While for the cable (or modem) the data can be transmitted into both directions as permanent data stream, for an Ethernet connection data packets are transmitted as blocks. The INSYS Ethernet therefore collects the data to be transmitted for a defined period and then sends them to the remote terminal in one individual packet. As a countermove, the bytes of a data packet which was received via Ethernet is continuously sent via the serial interface.

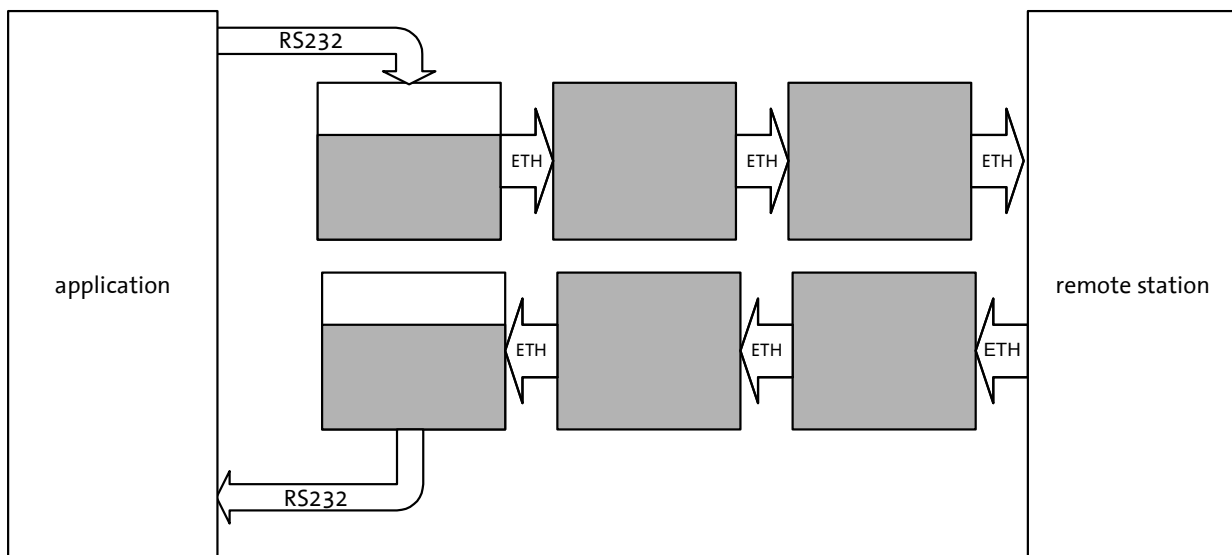


The INSYS Ethernet has several algorithms which determine when the data collection is finished and the packet is sent.

- IP block formation after the block formation time has expired.
- IP block formation when the maximal block size is reached
- IP block formation when a trigger byte occurs

IP block formation after the block formation time has expired

If data is constantly received via the serial interface in sufficient speed, 1460 bytes are packed every time and sent as one packet. 1460 bytes is the maximum permitted size of an IP data packet.


If the data supply at the serial interface jams, after a configurable waiting time during which no data via the serial interface arrives at the INSYS Ethernet 5.x, the packet is packed and sent ahead of time. This waiting time (block forming time) is set with the command **ATS8=<n>**.

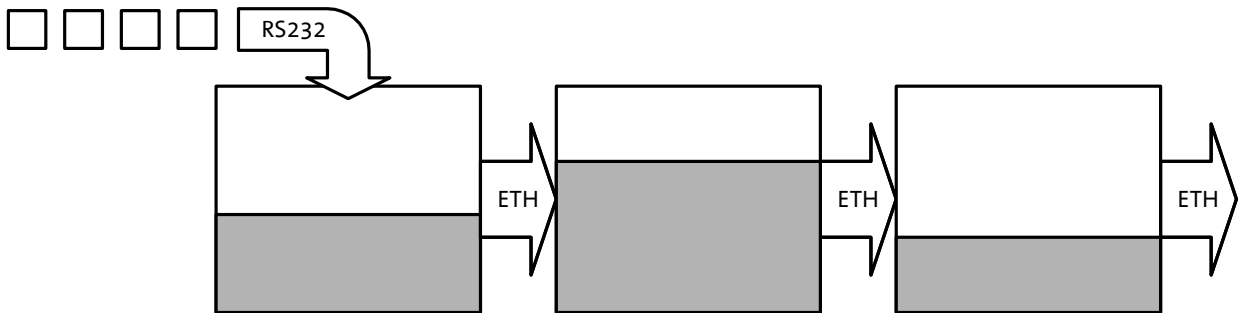

IP block formation when the maximal block size is reached


If, for example, in an application an RS232 cable is replaced by two INSYS Ethernet and a network segment, the following will occur:

The data are sent in series to the INSYS Ethernet, where they are collected and then sent to the second INSYS Ethernet as a packet. This second module will send the individual data from the package again in series to the remote terminal of the application. Each byte will therefore be transmitted twice in series and requires at least double the transmission time as with a direct serial connection.

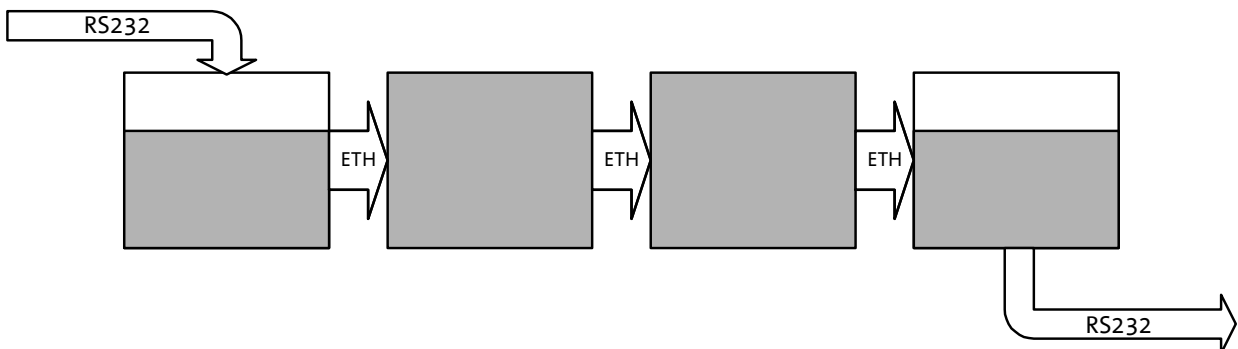


For larger, constant data flows, this is qualified by the pipeline effect.

This means that while INSYS Ethernet#2 sends the last data block to the remote terminal, INSYS Ethernet#1 will already be able to receive the next data block from the application. During optimum network connections the entire transmission time is therefore only insignificantly extended.

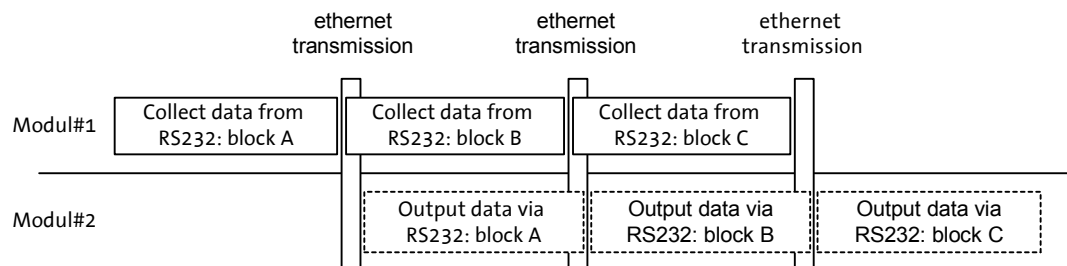


For some application protocols, this pipeline effect can not be utilized in the best possible way. When data blocks are sent in the serial protocol of the end application and confirmed by the remote terminal (the next block is sent afterwards, etc. ...), the following scenario might possibly occur:

The application sends a data block (e.g. 1400 bytes) in series to the INSYS Ethernet, where the data is collected and forward by Ethernet after the block forming time has extended. The second INSYS Ethernet receives the packet and sends the data in series to the remote terminal of the application. The application itself will not forward the data, however, because it first needs to have the last 1400 bytes confirmed from its remote terminal. The pipeline effect is not utilized and the data is on the way twice as long (+ block formation time).

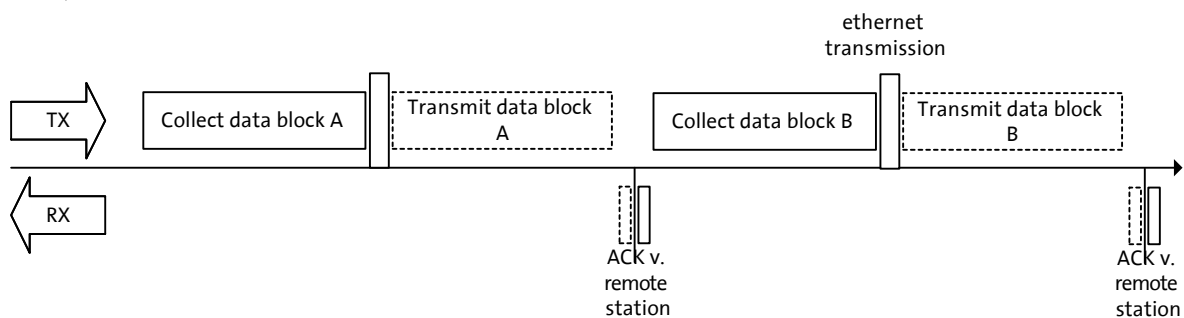

In this case, the maximum block size could be reduced with **AT#MSS=<n>** to be able to use the pipeline effect at least partly. A maximum block size of 1/4 of the application data packet to be expected (example: **AT#MSS=350**) would reduce the transmission time roughly from factor 2.0 to 1.25. However, for too small IP block sizes the achieved pipeline effect on the serial interface is destroyed by the increased overhead (IP header for each packet = high amount of data) on the Ethernet side. The optimum for each application depends on several factors and can only be found through actual tests.

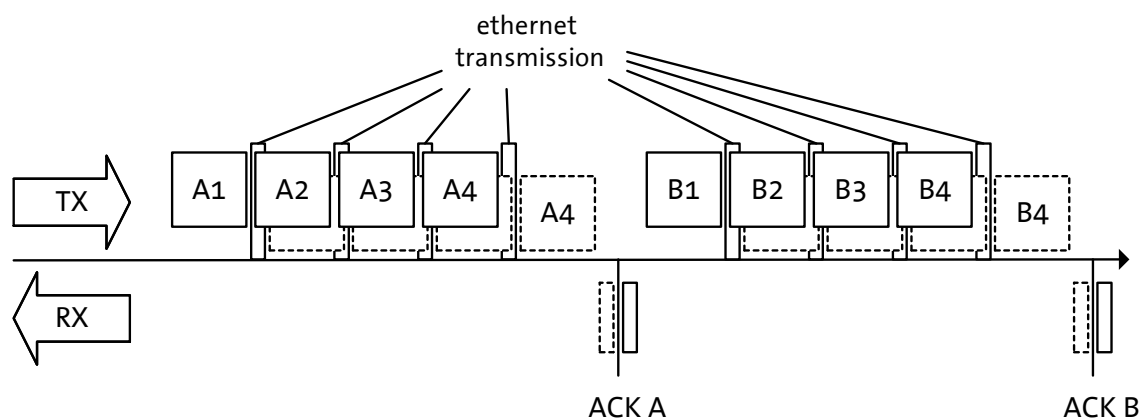

IP block formation when a trigger byte occurs

A further possibility to end the block formation ahead of time is the triggering to a certain byte in the data stream of the application protocol. The trigger byte can be defined with **ATS9=<n>**. This method is only recommended for pure ASCII data streams, as for binary data the trigger byte may accidentally be included in the data load.

Pertinent AT commands	
AT#MSS=<n>	Maximum size of an IP packet
ATS8=<n>	Block forming time in ms
ATS9=<n>	Definition of the trigger byte

7.4.4 Firmware flash update

Requirements:

For the flash load function you will need a PC and a terminal program (e.g. TeraTerm, ProComm, HyperTerminal, etc.).

- The terminal program must be able to perform an ASCII upload (ASCII data transmission protocol).
- Setting the hardware flow control is mandatory.
- For safety, any interpretation of characters (e.g. TAB, CR, BS ...) by the ASCII upload protocol must be prevented.

Activation and Process:

- **AT**** starts the update process for the firmware (flash update).
- After the prompt, the firmware (file extension HEX) must be sent as text file.
- After a successful flash update, the device resets autonomously. This process may last up to 60 seconds.

**Note**

To update the firmware, hardware handshake (RTS/CTS) must be activated at the terminal.

The firmware is available as ***.HEX** file from the technical support department.


- E-mail: insys@insys-tec.de
- 0941/560061

Pertinent AT commands	
AT**	Firmware update of the controller

8 Ethernet COM Driver

The Ethernet COM driver offers the simple option to establish a connection with the INSYS Ethernet from a Windows PC. On the PC side, a normal COM port is simulated, and the data is output transparently at the serial interface of the INSYS Ethernet.

This makes it possible to use existing software to communicate via the LAN (Internet / Intranet) with a device at a remote RS232 interface.

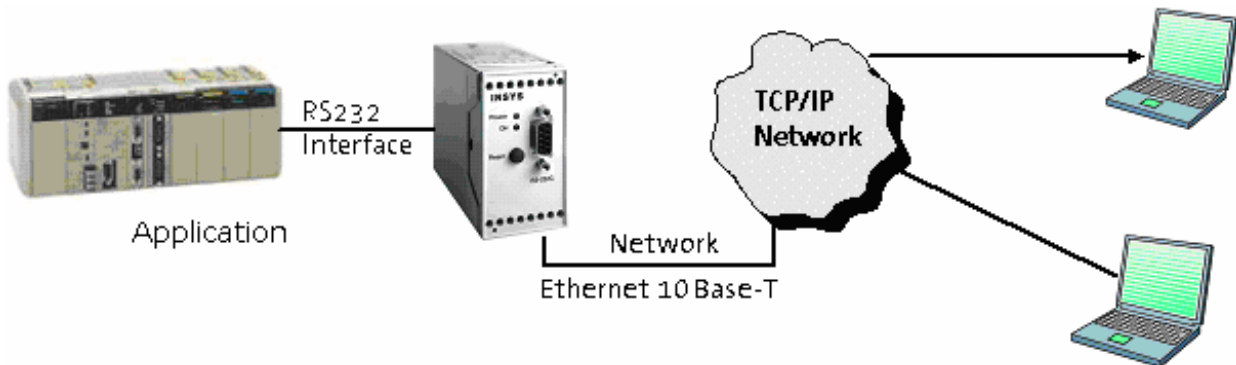

Sample application with INSYS Ethernet

**Note**

Please find more detailed information for the installation and the mode of operation of the Ethernet COM driver in the driver documentation.

9 AT Command Reference

Notes for entering AT commands

Each **AT** command starts with the letters **AT** and ends with a “Carriage Return” (CR). Capital and small letters will both be accepted, but the leading characters must be either ‘**AT**’ or ‘**at**’.

The command line is evaluated after the modem receives a return command.

In the description, a parameter with the letter **<n>** means that it can have various values. For example **AT&C<n>**, where **<n>** can have the values 0 to 1.

For commands which expect a parameter but don't have a parameter, the modem will automatically assume the parameter 0. For example, the commands **ATI** and **ATI0** will have the same effect.

Several commands can be combined to form one single AT command line (Example: **AT&K3&C0#DHCP=1**).

Syntax:

<expression> Input of a parameter
<pause> Means a waiting period of one second
[expression] Optional input of a parameter

The factory settings are marked “(default)”.

Individual value query

Most parameters can be read using **AT&V** (overall view) or per individual value query. Each parameter that is set with '=' is queried with '?'.

Example: **AT#PORT=1234**
 AT#PORT?
 1234

Storing settings permanently

The set of parameters is organized into two different groups. The settings that can be stored using **AT&W** are immediately stored in the current profile after having been entered, but will only be stored permanently in the memory with **AT&W**. (see **AT&W**)

Example: After **ATE0** the echo is immediately switched off. However, after a restart echo will be available again. **ATE0&W** will switch the echo off permanently.

All other settings (the so-called network settings) will be immediately written into the fail-safe memory, but will only be available after a restart.

List of AT commands

Command	Description
---------	-------------

ATA	<u>Manual connection acceptance</u> The device accepts an incoming connection. The command will only work if the device has previously received packets at the local port and has issued " RING ".
AT+C<n>	<u>DCD behavior</u> AT+C0 DCD always on AT+C1 DCD only on with existing connection (default)
ATD<IP address>:<port> or ATD"<domain name>" :<port>	<u>Dial remote terminal</u> Remote terminal is an IP address: The remote terminal is specified in the format IP number:port. If no port is specified, the own port number (set with AT#PORT) is also used for the remote terminal. Optionally, it is possible to specify information regarding the necessary protocol (ATDT for TCP/IP or ATDU for UDP/IP), before the remote terminal is specified. The remote terminal must be set to the according protocol. Example: ATDT192.168.100.111:1234 dials port "1234" of the IP address 192.168.100.111 . Log: TCP/IP. ATDT192.168.100.111:1234 dials port "1234" of the IP address 192.168.100.111 . Log: UDP/IP. UDP protocol: An empty UDP packet is sent as connection request. For UDP connections a CONNECT is issued in each case, because there is no connection management for UDP and therefore no confirmation from the recipient to the sender. The data is distributed into the network without confirmation. The remote terminal is a domain name: If the remote terminal is a domain name, the INSYS Ethernet must first query the IP address of the domain from a domain name server to be able to establish a connection. A DNS server must be defined using the command AT#DNS . Example: ATD"www.google.com" : 80 dials the domain www.Google.com at port 80. If no port is specified, the own port number (set with AT#PORT) is also used for the remote terminal.
AT&D<n>	<u>Behavior with DTR drop</u> When the DTR line is deactivated during an existing connection, the function set through AT&D is executed. AT&D0 Ignore DTR drop (for operation at applications which do not serve the DTR line) AT&D2 A DTR drop causes the device to terminate the connection (default). AT&D3 A DTR drop caused the module to terminate the connection and perform a reset.

AT#DHCP=<n>	<p><u>Activate/deactivate DHCP mode</u></p> <p>Use the command AT#DHCP to automatically activate or deactivate the automatic address allocation via DHCP. An accordingly configured server must be available in the network.</p> <p>AT#DHCP=1 The INSYS Ethernet will automatically retrieve the IP address from a DHCP server when switched on.</p> <p>AT#DHCP=0 The IP address set with AT#IP is used. (default).</p> <p>The settings from the stored profile (AT#IP, AT#NM, AT#GW) are not affected by the usage of DHCP. For AT#DHCP=0, the old values will again be available.</p> <p>After a reset or power up, it may take a few minutes until the device receives its settings from the DHCP server.</p>
AT#DNS<n>=<IP address>	<p><u>Definition of a domain name server</u></p> <p>The command defines a DNS server. The registration of a DNS server is required if during dialing a domain is used instead of an IP address.</p> <p>The device can manage up to two DNS servers. As a parameter, the IP address of the DNS server is specified.</p> <p>Example:</p> <p>AT#DNS1=212.112.77.12</p> <p>AT#DNS2=81.114.44.1</p>
AT#DTC=<n>	<p><u>Idle connection control (Data Transmit Controller)</u></p> <p>The data transmit controller causes an unused connection to terminate automatically. If no data is sent within the preset time, the connection is terminated.</p> <p>AT#DTC=<n> n in units of seconds</p> <p>AT#DTC=0 The data transmit controller is switched off (default)</p> <p>AT#DTC=255 Maximum value</p>
ATE<n>	<p><u>Command entry Echo</u></p> <p>This command toggles the responses, which the modem creates as reactions from PC commands (Echo).</p> <p>ATE0 Switch off Echo</p> <p>ATE1 Switch on Echo (default)</p>

AT&F	<p><u>Load factory settings</u></p> <p>The factory settings are loaded. All factory settings in this AT command list are marked "(default)".</p> <p>All settings, which can be stored using AT&W, are affected by AT&W (not the network settings, see also AT&W). However, not all settings that were stored are changed, only the currently active settings.</p> <p>By entering the command sequence AT&F&W, the device can be returned to the factory settings (excluding the network settings).</p> <p>Exception:</p> <p>The network settings, as well as the baud rate (AT*S) and the data format (AT*U) are not affected. These settings can only be reset using the factory reset.</p>						
AT#GW=<IP address>	<p><u>Set gateway address</u></p> <p>The standard gateway is set with AT#GW. Data packets to remote IP addresses which can not be accessed directly in the local network segment, are routed via a gateway (e.g. router).</p> <p>Factory setting: AT#GW=0.0.0.0</p> <p>IP address, gateway and network mask must be coordinated in the local network segment.</p>						
ATH	<p><u>Dummy command</u></p> <p>Command without effect, implemented for compatibility to the modem – response “OK”.</p> <p>When the connection is interrupted with the sequence “+++”, the device will terminate the connection.</p>						
ATI<n>	<p><u>Device identification display</u></p> <table data-bbox="459 1238 1348 1395"> <tr> <td>ATI0</td><td>The device type ("Ethernet V3") is displayed</td></tr> <tr> <td>ATI3</td><td>The version number and the date when the firmware was created is displayed.</td></tr> <tr> <td>ATI4</td><td>The ID string and the version number are displayed.</td></tr> </table>	ATI0	The device type (" Ethernet V3 ") is displayed	ATI3	The version number and the date when the firmware was created is displayed.	ATI4	The ID string and the version number are displayed.
ATI0	The device type (" Ethernet V3 ") is displayed						
ATI3	The version number and the date when the firmware was created is displayed.						
ATI4	The ID string and the version number are displayed.						
AT*I<n>	<p><u>Querying the alarm input</u></p> <table data-bbox="459 1462 1181 1550"> <tr> <td>Response</td><td><Input1>, <Input2></td></tr> <tr> <td>0</td><td>Input is connected to GND and therefore activated</td></tr> <tr> <td>1</td><td>Input is open and therefore not activated</td></tr> </table>	Response	<Input1>, <Input2>	0	Input is connected to GND and therefore activated	1	Input is open and therefore not activated
Response	<Input1>, <Input2>						
0	Input is connected to GND and therefore activated						
1	Input is open and therefore not activated						

AT#IOT=<n>	<p><u>Transmission of the input states</u></p> <p>AT#IOT=0 Deactivated (default)</p> <p>AT#IOT=1 Activated</p> <p>It is necessary for the transmission that at the two involved devices the address and port set in AT&Z1 equal the according address (AT#IP) and the port (AT#PORT) of the remote terminal. At both devices AT#IOT=1 must be activated.</p> <p>The transmission of the inputs to the remote terminal takes place via UDP packets. The UDP packets are automatically sent every 30 seconds, or within 1 second if changes occur at the inputs. They include the status of the two alarm inputs UE and UE2. The remote terminal processes the packets and sets its outputs UA and UA2 accordingly. It is thus possible to transmit 2 I/O lines from one device to another one in a simple way. The transmission is performed completely in the background and is therefore independent from the actual data connection.</p>																								
AT#IP=<IP address>	<p><u>Set own IP address</u></p> <p>AT#IP sets the own IP address of the device, e.g.</p> <p>AT#IP=192.168.1.1</p> <p>The factory setting is AT#IP=0.0.0.0</p> <p>IP address, gateway and sub network mask must be coordinated in the local network segment.</p>																								
AT+IPR=<baud rate>	<p><u>Set baud rate</u></p> <p>AT+IPR sets the baud rate at the serial interface. The following baud rates are supported:</p> <table data-bbox="451 1182 1034 1733"> <tbody> <tr><td>AT+IPR=300</td><td>300 bps</td></tr> <tr><td>AT+IPR=600</td><td>600 bps</td></tr> <tr><td>AT+IPR=1200</td><td>1.200 bps</td></tr> <tr><td>AT+IPR=2400</td><td>2.400 bps</td></tr> <tr><td>AT+IPR=4800</td><td>4.800 bps</td></tr> <tr><td>AT+IPR=9600</td><td>9.600 bps</td></tr> <tr><td>AT+IPR=19200</td><td>19,200 bps (default)</td></tr> <tr><td>AT+IPR=38400</td><td>38,400 bps</td></tr> <tr><td>AT+IPR=57600</td><td>57,600 bps</td></tr> <tr><td>AT+IPR=115200</td><td>115,200 bps</td></tr> <tr><td>AT+IPR=230400</td><td>230,400 bps (not for INSYS Ethernet)</td></tr> <tr><td>AT+IPR=460800</td><td>460,800 bps (not for INSYS Ethernet)</td></tr> </tbody> </table> <p>For settings of more than 115,200 bps the actual speed is 1.7 % higher than the nominal speed (234,375 or 468,750 bps).</p> <p>ATTENTION: Most of the RS232 level converters and terminal programs only support baud rates up to 115,200 baud. Accidentally set and saved data rates which are above those numbers can only be corrected with a factory reset.</p>	AT+IPR=300	300 bps	AT+IPR=600	600 bps	AT+IPR=1200	1.200 bps	AT+IPR=2400	2.400 bps	AT+IPR=4800	4.800 bps	AT+IPR=9600	9.600 bps	AT+IPR=19200	19,200 bps (default)	AT+IPR=38400	38,400 bps	AT+IPR=57600	57,600 bps	AT+IPR=115200	115,200 bps	AT+IPR=230400	230,400 bps (not for INSYS Ethernet)	AT+IPR=460800	460,800 bps (not for INSYS Ethernet)
AT+IPR=300	300 bps																								
AT+IPR=600	600 bps																								
AT+IPR=1200	1.200 bps																								
AT+IPR=2400	2.400 bps																								
AT+IPR=4800	4.800 bps																								
AT+IPR=9600	9.600 bps																								
AT+IPR=19200	19,200 bps (default)																								
AT+IPR=38400	38,400 bps																								
AT+IPR=57600	57,600 bps																								
AT+IPR=115200	115,200 bps																								
AT+IPR=230400	230,400 bps (not for INSYS Ethernet)																								
AT+IPR=460800	460,800 bps (not for INSYS Ethernet)																								

AT&K<n>	<p><u>Data flow control at the RS232 (handshake)</u></p> <p>AT&K0 Switches the data flow control off</p> <p>AT&K3 Switches the hardware data flow control (RTS/CTS) on (default)</p> <p>AT&K4 Switches the software data flow control (Xon/Xoff) on.</p> <p>AT&K8 Activates the controlled half duplex operation on the serial interface for RS485</p> <p>In this mode, the CTS signal is deactivated (high), while the device sends data at the serial interface. Thus, the CTS signal can be used as driver release signal for a RS485 driver. Controlling of the data direction for RS485 takes place via the CTS signal. Polarity setting via AT&R<n>.</p>
AT#KEEP=<n>	<p><u>TCP/IP Keep Alive</u></p> <p>This timer enables the monitoring of an existing TCP/IP connection when no data is transferred. When 5 consecutive monitoring packets are not answered, the connection is terminated and re-established, if necessary (in leased line mode, see AT&L).</p> <p>AT#KEEP=1 . . 255 The time between monitoring packets in units of 10 seconds</p> <p>AT#KEEP=0 No monitoring packets (default)</p>
AT&L<n>	<p><u>Automatic connection setup (leased line)</u></p> <p>If no connection to the defined remote terminal exists, an automatic attempt to establish a connection is performed every 20 seconds. The remote terminal is set with the command AT&Z0.</p> <p>AT&L0 Deactivates the automatic connection setup</p> <p>AT&L1 Activates the automatic connection setup</p> <p>Note: AT&L1 must only be set at the devices connected to the leased line. The other device should be configured to automatic connection acceptance with ATS0=1. For the stability of the connection it is also advisable to activate Keep alive (AT#KEEP) on both sides.</p>
AT#MSS=<n>	<p><u>Set maximum segment size</u></p> <p>A maximum TCP segment size can be set using the command AT#MSS. This setting is only required under special circumstances, if the transmission is done via a router which doesn't support the maximum standard setting for the segment size of 1460 bytes, or for the timing optimization of application protocols resting on it (see Chapter IP block formation).</p> <p>AT#MSS=<n> Maximum TCP segment size n=1...1460 default = 1460</p>

AT#NM=<sub net-work mask>	<p><u>Set network mask</u></p> <p>AT#NM sets the address range of the local network in connection with AT#IP. All packets that are not sent to the local network, are sent to the gateway address set by AT#GW.</p> <p>Factory setting: AT#NM=255.255.255.0</p> <p>IP address, gateway and network mask must be coordinated in the local network segment.</p>
AT&O<n>	<p><u>Set the function of the OH line</u></p> <p>AT&O0 OH is active as soon as a physically functioning Ethernet link is available, i.e. the module is connected to a hub/switch (default)</p> <p>AT&O1 OH is active as soon as a connection (TCP/IP or UDP/IP) is active</p>
AT#PING<IP address> or AT#PING "<domain name>"	<p><u>Send PING</u></p> <p>AT#PING a.b.c.d sends an echo request (PING) to a remote terminal (similar to the standard TCP/IP program). If an echo is received within a timeout period of 2 seconds, the required time is displayed.</p> <p>Alternatively, a ping can also be sent directly to a domain, e.g.</p> <p>AT#PING"www.google.com"</p> <p>The prerequisite is the specification of a DNS server with the command AT#DNS.</p> <p>AT#PING is used to check if an IP number can be reached. If AT#PING fails, no connection can be established to the specified IP number.</p> <p>The reason could be a wrong configuration or a firewall between the two network subscribers.</p>
AT#PORT=<n>	<p><u>Set local port number</u></p> <p>AT#PORT=<n> sets the local port number to the value n (1..65535). This is the port number at which the device is waiting for incoming connections. For outgoing connections, for which no specific port number has been specified, this value is set as default value as well.</p> <p>Factory setting: AT#PORT=1234</p>
ATQ<n>	<p><u>Quiet control</u></p> <p>This command switches the sending of messages via the serial interface on or off.</p> <p>ATQ0 Send messages to PC (default)</p> <p>ATQ1 Don't send messages to PC</p>
AT#QUIET=<n>	<p><u>Suppress switch-on message</u></p> <p>AT#QUIET=0 Shows the switch-on message during the cold start (default)</p> <p>AT#QUIET=1 Suppresses the switch-on message of the device</p>

AT&R<n>	<u>Polarity of the CTS control line</u> For controlling a RS485 driver (see also AT&K8). The CTS signal is set to active or inactive when the device receives on the serial interface: AT&R0 CTS signal inactive (low) for sending AT&R1 CTS signal active (high) for sending (default)
AT#RBT AT#RESET	<u>Restart</u> The device is rebooted. All parameters are reloaded from the permanent memory.
ATS0=<n>	<u>Number of ringing tones until automatically going off-hook</u> ATS0=<n> Determines the number of ringing tones (received packets), after which it automatically goes off-hook. ATS0=200 Manual call acceptance ATS0=0 Deactivates automatically going off-hook ATS0=1 Goes off-hook when the local port is accessed for the first time (default) For UDP/IP connections, ringing tones represent single (also empty) UDP/IP network packets. For TCP/IP connections, connection requests of a remote terminal („ SYN “) are recognized as ringing tones. While the UDP connection is established, the devices send an empty UDP data packet in the beginning, so the remote terminal device accepts the connection if it is configured with ATS0=1 . Important difference to modems: In TCP/IP mode, for ATS0=0 the connection acceptance is completely blocked, i.e. „ RING “ is not displayed for a connection request.
ATS1?	<u>Number of received packets for connection request</u> Query of the number of TCP-SYN packets that were received up to now. This registry is used to achieve a behavior such as, for example, ATS0=2 . This registry is a pure read register (Read-Only).
ATS2=<n>	<u>Character for escape sequence</u> The escape sequence consist of a series of a 1 second pause, 3 times the escape character and 1 second pause again. (The pre and post run time of 1 second can be changed using ATS12) ATS2=0 . . . 127 Determination of the escape character as ASCII code ATS2=128 Functionality deactivated ATS2=43 (default)
ATS3=<n>	<u>Carriage Return – CR</u> ATS3=0 . . . 127 Determination of the character as ASCII code ATS3=13 (default) The setting is <i>not</i> stored with AT&W in the permanent memory.

ATS4=<n>	<u>Character for line feed – LF</u> ATS3=0 . . . 127 Determination of the character as ASCII code ATS3=10 (default) The setting is <i>not</i> stored with AT&W in the permanent memory.
ATS5=<n>	<u>Character for backspace – BS</u> ATS5=0 . . . 127 Determination of the character as ASCII code ATS5=8 (default) The setting is <i>not</i> stored with AT&W in the permanent memory.
ATS8=<n>	<u>Set waiting period for block formation</u> Sets the waiting time until a block is sent via the network. The unit is in 1/1000 seconds (1 ms). The time starts to run as soon as a character is received. As soon as no more data is received from the serial interface during the period set in S8, a data packet is sent. Small values in S8 lead to faster transmission of short messages, but increase the number of packets and therefore the load on the network side. Large packets in S8 lead to a delay of small data packets. ATS8=2 . . 255 Waiting period in milliseconds (corresponds to 2ms ... 255 ms) ATs8=50 50 ms (default)
ATS9=<n>	<u>Set message end character for block formation</u> Sets the character for ending an IP packet. With this setting, packets can be sent immediately regardless of the setting in the S8 registry. As soon as the character defined in S9 is received at the serial interface, the entire data block collected until then is sent. ATS8=0 . . 254 Define packet end character ATS8=255 Deactivate packet end ID (default)
ATS12=<n>	<u>Pre and post run time for escape sequence</u> Minimum pre and post run time when sending the escape sequence („+++“) ATS12=2 . . . 255 Time in units of 1/10 seconds ATS12=10 1 second (default)
ATS<n>?	<u>Query S-registry</u> n = 0,1,2,3,4,5,8,9,12 Query of the according registry Access to other S-registries will not lead to errors, but also has no effect. When reading non-implemented S-registries the value „0“ is returned.

AT#TLP= "<password>"	<u>Password for remote configuration</u> AT#TLP="password" - in quotation marks! – maximum length: 8 characters. The entry is case sensitive. Factory setting: insys The user name and the Telnet port are determined with AT#TLU and AT#TEL .																		
AT#TLU="<name>"	<u>User name for remote configuration</u> AT#TLU="name" - in quotation marks! – maximum length: 8 characters. The entry is case sensitive. Factory setting: insys The password and the Telnet port are determined with AT#TLP and AT#TEL .																		
ATT	<u>Select TCP mode</u> For the next connection ATT selects the TCP mode. This setting applies to ATD commands without a specific protocol (e.g. ATD192.168.100.200:1234) or for incoming calls.																		
ATU	<u>Select UDP mode</u> For the next connection, ATU selects the UDP mode. This setting applies to ATD commands without a specific protocol (e.g. ATD192.168.100.200:1234) or for incoming calls.																		
AT*U<n>	<u>Select the data format at the serial interface</u> The data format can be preselected with this command. The following formats (data bits, parity, stop bits) are supported: <table> <tr><td>AT*U0</td><td>8N1 (default)</td></tr> <tr><td>AT*U1</td><td>7E1</td></tr> <tr><td>AT*U2</td><td>7O1</td></tr> <tr><td>AT*U4</td><td>7E2</td></tr> <tr><td>AT*U5</td><td>7O2</td></tr> <tr><td>AT*U6</td><td>7N2</td></tr> <tr><td>AT*U7</td><td>8E1</td></tr> <tr><td>AT*U8</td><td>8O1</td></tr> <tr><td>AT*U9</td><td>8N2</td></tr> </table>	AT*U0	8N1 (default)	AT*U1	7E1	AT*U2	7O1	AT*U4	7E2	AT*U5	7O2	AT*U6	7N2	AT*U7	8E1	AT*U8	8O1	AT*U9	8N2
AT*U0	8N1 (default)																		
AT*U1	7E1																		
AT*U2	7O1																		
AT*U4	7E2																		
AT*U5	7O2																		
AT*U6	7N2																		
AT*U7	8E1																		
AT*U8	8O1																		
AT*U9	8N2																		
ATV<n>	<u>Select message format (short or long format)</u> ATV sets the format for responses. <table> <tr><td>ATV0</td><td>This displays message numbers.</td></tr> <tr><td>ATV1</td><td>The messages are displayed in clear text. (default)</td></tr> </table>	ATV0	This displays message numbers.	ATV1	The messages are displayed in clear text. (default)														
ATV0	This displays message numbers.																		
ATV1	The messages are displayed in clear text. (default)																		
AT&V<n>	<u>Display settings and connection statistics</u> <table> <tr><td>AT&V0</td><td>Displays the current and saved settings of the device.</td></tr> <tr><td>AT&V1</td><td>Displays the diagnostic data of the last connection (connection partner, reason for disconnect).</td></tr> </table>	AT&V0	Displays the current and saved settings of the device.	AT&V1	Displays the diagnostic data of the last connection (connection partner, reason for disconnect).														
AT&V0	Displays the current and saved settings of the device.																		
AT&V1	Displays the diagnostic data of the last connection (connection partner, reason for disconnect).																		

AT&W	<p><u>Save settings</u></p> <p>AT&W saves all current settings in the permanent memory. The settings are restored from this permanent memory, when the device is switched on.</p> <p>The following AT settings are stored:</p> <p>AT&C, AT&D, AT#DTC, ATE, AT&K, AT&L, AT&O, AT#QUIET, ATQ, AT&R, ATS0, ATS2, ATS8, ATS12, AT*S, AT&S, AT*U, ATT, ATU, ATV, AT&X, AT*Y.</p>
ATX	<p><u>Dummy command</u></p> <p>Command without effect, implemented for compatibility to the modem – response “OK”.</p>
AT&X	<p><u>Shutting off the serial interface (RS232) via AT</u></p> <p>AT&X0 The module reacts to AT commands via the serial interface (default).</p> <p>AT&X1 Via the serial interface, no serial interface is possible any longer. Data connections will function as usual.</p> <p>As soon as the AT interface has been switched off via the RS232, the device can only be set via the TELNET configurator. A RESET will exit this mode as long as no saving procedure with AT&W has taken place.</p> <p>If the setting was saved permanently with AT&W, the device can be restarted using a factory reset (3 RESET pulses).</p>
AT*Yx,y	<p><u>Switch outputs</u></p> <p>x: Port</p> <p> 0 Port UA1</p> <p> 1 Port UA2</p> <p>y: Desired condition of the UA_x output</p> <p> 0 Pin UA_x low</p> <p> 1 Pin UA_x high</p> <p>Notes: If no port is specified (x), UA1 is used</p> <p>Factory setting: AT*Y0,0 AT*Y1,0</p>
ATZ	<p><u>No function</u></p> <p>Command without effect, implemented for compatibility to the modem – response “OK”.</p>
AT&Z0=<IP>: <port> or AT&Z0=<domain name>:<Port>	<p><u>Remote terminal for automatic connection setup (leased line)</u></p> <p>Example: AT&Z0=192.168.100.200:1234</p> <p>Example: AT&Z0="www.google.de":80</p> <p>For the automatic connection setup, see the description for AT&L.</p>
AT&Z1=<IP>: <port>	<p><u>Remote terminal for the transmission of the I/O alarm inputs</u></p> <p>Example: AT&Z1=192.168.100.200:1234</p> <p>Function description of the transmission, see AT#IOT.</p>

AT**	<p><u>Firmware update</u></p> <p>AT** starts the update process for the firmware (flash update).</p> <p>After AT** is entered, the device prepares itself for receiving the new firmware.</p> <p>After the response „Send .HEX file now.“ the firmware (file with the extension HEX) is sent as a text file in ASCII mode.</p> <p>To update the firmware, hardware handshake (RTS/CTS) must be activated at the terminal.</p> <p>After the file has been sent, the firmware update needs some (up to 60) seconds time during which the update is carried out.</p> <p>After the flash update, the device is completely reset.</p>
<Pause> +++ <Pause>	<p><u>Terminating the data connection</u></p> <p>With the Escape sequence, the data connection can be terminated via the serial interface. There is no online command mode like for a modem available.</p> <p>Entry: 1 second pause before and after the entry, no <CR> .</p>

10 Responses and Numerical Codes

The following message texts (setting **ATV1**) or message numbers (setting **ATV0**) are provided by INSYS Ethernet:

Message number Short form (ATV0)	Message text Long form (ATV1)	Meaning
0	<i>OK</i>	Command was accepted
1	<i>CONNECT</i>	Connection was established
2	<i>RING</i>	Connection request was recognized
3	<i>NO CARRIER</i>	Connection was terminated
4	<i>ERROR</i>	Error in AT command string
8	<i>NO ANSWER</i>	No connection with remote terminal

